

# Installation and Operating Instructions

for Garage Sectional Door

Last update: 06.2006

**GB**



**Note:**

The instructions consist of two documents, one diagram and one text book.

# 1. Table of Contents

<b>1.</b>	<b>Table of Contents</b>	<b>3</b>	<b>GB</b>
<b>2.</b>	<b>Explanation of symbols</b>	<b>4</b>	
<b>3.</b>	<b>List of screws, bolts and plugs</b>	<b>5</b>	
<b>4.</b>	<b>Warranty</b>	<b>6</b>	
<b>5.</b>	<b>General safety information</b>	<b>7</b>	
<b>6.</b>	<b>Scope of delivery / Required tools</b>	<b>8</b>	
<b>7.</b>	<b>Installation of the sectional door</b>	<b>9</b>	
7.1	Checking the dimensions	9	
7.2	Mount the frames to the wall	10	
7.3	Mounting the springs	15	
7.4	Mounting the rails to the frame	20	
7.5	Mounting the cables	24	
7.6	Mounting the rails to the ceiling	26	
7.7	Mounting the door sections	30	
7.8	Mounting the cables to the door leaf	37	
7.9	Setting the spring tension	38	
7.10	Mounting the door link bracket	39	
7.11	Mounting the pull cord	39	
7.12	Re-mounting the cross strut (optional)	40	
7.13	Testing the door travel	41	
<b>8.</b>	<b>Maintenance instructions sectional door</b>	<b>43</b>	

## 2. Explanation of symbols



**Caution! Risk of personal injuries!**



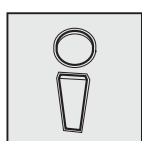
**Attention! Risk of material damage!**



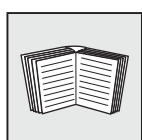
**Note**



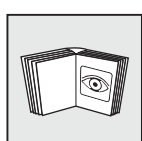
**Operational check**



**Reference**

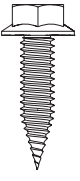
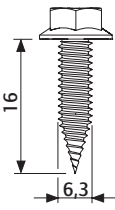
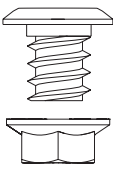
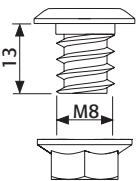
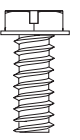
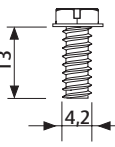

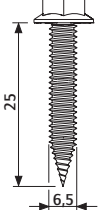

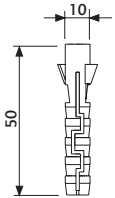

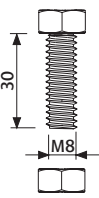
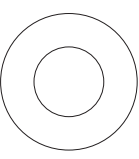
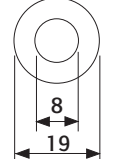
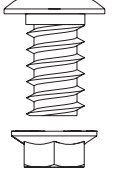
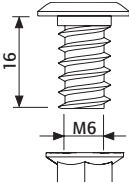

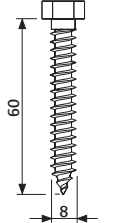
 
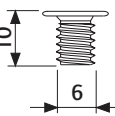
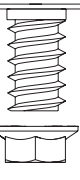
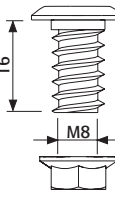


**Text book**



**Picture book**

### 3. List of screws, bolts and plugs

 <p>Type 1</p>	<p>Type 1: 6,3 mm x 16 mm screw</p>		 <p>Type 8</p>	<p>Type 8: M8 x 13 mm bolt</p>	
 <p>Type 2</p>	<p>Type 2: 4,2 mm x 13 mm screw</p>		 <p>Type 9</p>	<p>Type 9: 6,5 mm x 25 mm screw</p>	
 <p>Type 3</p>	<p>Type 3: Plug</p>		 <p>Type 10</p>	<p>Type 10: M8 x 30 mm bolt</p>	
 <p>Type 4</p>	<p>Type 4: 8 mm x 19 mm washer</p>		 <p>Type 11</p>	<p>Type 11: M6 x 16 mm bolt</p>	
 <p>Type 5</p>	<p>Type 5: 8 mm x 60 mm screw</p>				
 <p>Type 6</p>	<p>Type 6: 6 mm x 10 mm screw</p>				
 <p>Type 7</p>	<p>Type 7: M8 x 16 mm bolt</p>				

GB

## 4. Warranty

**Due to their frequent use wear parts have, a limited service life and are therefore excluded from warranty!**

The following are classed as wear parts:

- Springs
- Cables
- Rollers
- Seals
- Cable rollers
- Drive system
- Locks / Locking mechanism
- Bowden cables
- Hinges

**Warranty with regard to functioning and safety can only be granted if:**

- Installation is carried in compliance with these instructions
- Only original accessories are used
- No additional objects are fixed to the door
- Regular door maintenance is carried out

**Warranty shall not apply if these installation and operating instructions are not completely observed.**

**Subject to technical changes.**

## 5. General safety information

**Note:**

Please keep these instructions for future reference!

**GB**

Please read and always observe these instructions! They provide you with important information regarding safe installation and operation of the sectional door. The instructions also describe the correct care and maintenance of your door to ensure satisfaction with this product for many years to come.

**Caution:**

- Installation should only be carried out by a person qualified for the task.
- For reasons of safety, only carry out the installation steps in the sequence specified in these instructions.
- Only mount the door onto structurally sound and static surfaces which are capable of supporting the door weight.

**Intended use**

- This garage door has been designed for private use only (approx. 1000 cycles / year).
- Continuous operation is strictly forbidden.

**Site requirements for installation / operation:**

At the construction site please ensure that:

- The floor is at its finished height
- The walls and ceiling have been plastered.

To eliminate the risk of corrosion:

- Provide sufficient drainage outside the garage in front of the floor seal and frame parts!  
If necessary, plan a sloping run-off surface!
- Make sure that the building is dry and has sufficient ventilation!
- Protect the door against corrosive and caustic agents, e.g. saltpetre reactions from bricks or mortar, acids, alkalis, road salt, corrosive paints or sealing compounds!
- Always cover the door before plastering or painting, since spots of mortar, cement, plaster or paint can damage the surface.

## 6. Scope of delivery / Required tools

### Scope of delivery (fig. 6):

- Door leaf pack
- Frame pack
- Accessory pack

### Required tools (not included):

- Two wooden trestles or other supporting equipment
- Electric drill
- Drills
- Torx T-20
- 4 mm Allen key
- 8 mm Allen key
- SW 13 socket spanner
- SW 10 socket spanner
- SW 13 socket spanner
- Suitable plugs for the special installation situation: Autoclaved aerated concrete
- Screwdriver
- Metal saw
- Pliers
- Protective glasses
- Screw clamps
- Ladder or scaffolding
- Spirit level
- Tube level for the metre level
- Tape measure
- Protective gloves



## 7. Installation of the sectional door

### 7.1 Checking the dimensions

**GB****Attention:**

Prior to installation, please check whether the supplied door is suitable for the proposed installation site.

**Carry out the following measurements on the inside of the door opening (fig. 7.1):**

- A** Clearance width at the top and bottom of the door opening.  
The supplied opening dimensions have to correspond to the door clearance width.
- B** Clearance height on the right and left-hand side of the door opening.  
The supplied opening dimensions have to correspond to the required door clearance height.
- C** Headroom on the right and on the left-hand side above the door opening.
  - The headroom has to be at least 115 mm (for doors with electric drive).
  - The headroom has to be at least 140 mm  
(for very large doors with electric drive and 4x spring duct).
  - The headroom has to be at least 240 mm  
(for manually operated doors with exterior handle).
  - The headroom has to be at least 265 mm  
(for very large manually operated doors with exterior handle).
- D** The sideroom on the right and left-hand side of the door opening has to be at least 82.5 mm.

**Operational check:**

If all 4 requirements have been fulfilled, start installation.  
Please see the order form for the opening dimensions.

## 7. Installation of the sectional door

### 7.2 Mount the frames to the wall



#### Attention:

- It is important to install the lateral frames correctly to ensure that the door completely covers the opening and is straight.
- The metre level is only valid for standard heights. For special heights (shortened frame) the height level of the frame has to be transferred to the wall!

#### 7.2 - a Determining the metre level

- Mark one of the opening sides:  
**One meter** above the **upper edge of the finished floor** (OFF) (fig. 7.2 - 1).
- Transfer this measurement to the other opening side using the rear cross strut and a spirit level (a tube level can also be used) (fig. 7.2 - 2).
- Now measure the transferred height. It has to be **at least** 1 m.



#### Note:

If the distance to the floor is less than 1 m on the other side, carry out the measurement from this side!

#### 7.2 - b Attaching the header frame

The header seal is fixed to the header frame. This seal is equipped with a transport protection device to prevent transport damage.

- Please remove the transport protection device of the header seal (fig. 7.2 - 3).
- Please remove the protective film from the header frame (fig. 7.2 - 4).
- Connect the vertical frames to the header frame (fig. 7.2 - 5).



#### Attention:

- Ensure that the elements are not damaged.
- Ensure that the surface of the frame is not scratched.
- Screw the elements together, making sure that the outer edges are flush.

## 7. Installation of the sectional door

**GB**

- Use 2 sheet metal screws on each side to connect the elements:  
Headroom version 115 mm: fig. 7.2 - 6  
Headroom version 240 mm: fig. 7.2 - 7
- Fasten the screws.

### 7.2 - c Erecting the frame

**Caution:**

Two people are required to erect the frame.

**Attention:**

Ensure that the frame is neither twisted nor tilted during erection.

- Position the pre-assembled frame on the inside in front of the door opening (fig. 7.2 - 8).

### 7.2 - d Aligning and attaching the frame

- Align the frame to the centre of the door opening (fig. 7.2 - 9).
- Align the embossed mark on the frame on both sides to the marks on the wall (fig. 7.2 - 10).
- Use screw clamps to fix this position (fig. 7.2 - 11).
- Measure the distance between the frames at the top and bottom (fig. 7.2 - 9 and 7.2 - 12). Both distances have to be exactly the same.
- Clear frame dimensions = order dimensions width
- Check the diagonal dimensions (fig. 7.2 - 9)
- Check whether the frame is aligned horizontally in the door opening (fig. 7.2 - 13).
- Check whether the right and left-hand frame are aligned vertically in the door opening (fig. 7.2 - 14).

## 7. Installation of the sectional door

- Check whether the right and left-hand frame are aligned vertically to the wall (fig. 7.2 - 15). If the frame is not aligned correctly, use a shim at bottom.
- Check, whether the right and left frame is aligned vertically to the wall (fig. 7.2 - 15). If the frame is not vertically aligned, shim it at bottom.



### Operational check:

All the aforesaid points have to be carried out to ensure perfect door travel.

### 7.2 - e Attaching the frame



### Note:

There are **two** ways to attach the frame:

#### Mounting version 1 (inside mounting):

- If there is **sufficient soffit** behind the frame, screw the frame to the wall and floor **via the pre-cut holes** (fig. 7.2 - 16 to 7.2 - 21).

#### Mounting version 2 (outside mounting):

- If there is **not sufficient soffit** behind the frame, screw on the frame, **use the installation brackets on the right and left-hand side of the frame to attach it** (fig. 7.2 - 22 to 7.2 - 26).

#### Mounting version 1 (inside mounting):

- Drill through the pre-cut holes in the frame (min. drilling depth 60 mm) – drill diameter 10 mm (fig. 7.2 - 17).



### Attention:

The plug has to expand vertically!

- Insert the plug (fig. 7.2 - 18).

## 7. Installation of the sectional door

**GB**

- Place the installation bracket into the frame and screw on the frame via the installation bracket (fig. 7.2 - 18).
- Attach the installation bracket to the side of the frame using one bolt on each side (fig. 7.2 - 19).

### Screw frames with standard heights into the floor:

- Screw the frames to the floor (fig. 7.2 - 20).

### Screw frames with special heights into the floor:

- Screw the frame to the floor (fig. 7.2 - 21).

### Mounting version 2 (outside mounting):

- Hold the installation bracket next to the frame at the height of the pre-cut holes. Drill next to the frame (min. drilling depth 60 mm) through the installation bracket and into the wall – drill diameter 10 mm (fig. 7.2 - 22).



#### **Attention:**

The plug has to expand vertically!

- Insert the plug (fig. 7.2 - 23).
- Place the installation angle onto the frame and screw the installation angle to the wall (fig. 7.2 - 23).
- Attach the installation angle to the side of the frame using one bolt on each side (fig. 7.2 - 24).

### Screw frames with standard heights into the floor:

- Screw the frames to the floor (fig. 7.2 - 25).

### Screw frames with special heights into the floor:

- Screw the frames to the floor (fig. 7.2 - 26).

## 7. Installation of the sectional door

**Attention:**

Fix the frame bracket to the wall twice (fig. 7.2 - 27)!

This is necessary regardless of whether the installation bracket has been installed inside or next to the frame.

**Note:**

One screw fitting at the header frame is sufficient for door widths of up to 3 m.

Two screw fittings are necessary for door widths above 3 m.

The distance between these two screw fittings depends on the length of the header frame.

- Drill into the wall through the centre of the header frame (min. drilling depth 60 mm) – drill diameter 10 mm (fig. 7.2 - 28).
- Screw the header frame to the wall (fig. 7.2 - 29).

## 7. Installation of the sectional door

### 7.3 Mounting the springs

GB

#### 7.3 - a Installation of the 2 and 3-spring assembly

##### Installing the springs



**Attention:**

Always keep spring components clean. Otherwise problems may arise during later operation.

- Hook the springs into the "pulley block seat" (fig. 7.3 - 1).
- Use the two outer bore holes.



**Attention:**

If there is a third spring (depending on the door size), it should be hooked into the centre bore hole.

- Attach one spring support from below to the springs (fig. 7.3 - 2).



**Attention:**

The spring support has to be attached as near to the end as possible (fig. 7.3 - 3).

- Attach a second spring support from below to the other end of the springs (fig. 7.3 - 4).



**Attention:**

The spring support has to be attached as near to the end as possible (fig. 7.3 - 5).

- Attach the other spring supports from below to the springs; ensure that they are equally spaced (fig. 7.3 - 6).
- Insert bolt (A) into the bore hole of the angle plate.
- Fix the bolt with the respective nut (B) (fig. 7.3 - 7).
- Hook the angle plate onto the other end of the springs (fig. 7.3 - 8).
- Use the two outer bore holes.

## 7. Installation of the sectional door



### Attention:

If there is a third spring (depending on the door size), it should be hooked into the centre bore hole.

### Installation of the spring assembly into the rail



### Note:

The figure shows installation on the right-hand side. Installation on the left-hand side has to be carried out laterally reversed.

- Slide the pre-assembled spring assembly into the rail until only the pulley block protrudes from the rail (fig. 7.3 - 9).



### Attention:

- Lay the cables straight and ensure that they are not twisted.
- Pull the cable through the pulley block in a way that the squeezed cable ends (C) face the outside of the frame (A) and the plastic loop (D) faces the inside of the frame (B).

- Pull the squeezed cable ends (C) through the pulley block (fig. 7.3 - 10).
- Make sure the cable has been laid correctly.
- Pull the cable through the pulley block until the two ends are of equal length (fig. 7.3 - 11).
- Insert the cable locks into both sides of the pulley block seat (fig. 7.3 - 12).



### Attention:

Fully insert the cable locks up to the limit stop in the pulley block seat (fig. 7.3 - 13).

- Pull the spring assembly until approximately 10 mm of bolt (A) protrudes from the bore hole at the end of the rail (fig. 7.3 - 14).



## 7. Installation of the sectional door

GB

- Screw the nut onto the bolt protruding from the rail (fig. 7.3 - 15).
- Screw the nut as far as necessary until all the threads engage.



### Note:

This nut is later used to set the spring tension at the door.

### 7.3 - b Installation of the 4-spring assembly

#### Assembling the spring assembly



### Attention:

Always keep spring components clean.  
Otherwise problems may arise during later operation.

- Hook the springs into the "pulley block seat" (fig. 7.3 - 16).
- Use the two lower bore holes.
- Attach one spring support to the springs from below (fig. 7.3 - 17).



### Attention:

The spring support has to be mounted as near to the end as possible (fig. 7.3 - 18).

- Attach a second spring support to the other end of the springs from below (fig. 7.3 - 19).



### Attention:

The spring support has to be mounted as near to the end as possible (fig. 7.3 - 20).

- Attach the remaining spring supports from below to the springs; ensure that they are equally spaced (fig. 7.3 - 21).
- Fix bolt (A) in the angle plate using the respective nut (B) (fig. 7.3 - 22).

## 7. Installation of the sectional door

- Hook the angle plate onto the other end of the springs (fig. 7.3 - 23).  
Use the two lower bore holes.
- Insert the third and fourth springs into the "pulley block seat" (fig. 7.3 - 24).  
Use the two upper bore holes.
- Insert the third and fourth springs into the angle plate at the other end (fig. 7.3 - 25).  
Use the two upper bore holes.

### Installation of the spring assembly into the rail



**Note:**

The figure shows installation on the right-hand side.  
Assembly on the left-hand side is carried out laterally reversed.

- Slide the pre-assembled spring assembly into the rail until only the pulley block protrudes from the rail (fig. 7.3 - 26).



**Attention:**

– Lay the cables straight and ensure that they are not twisted.  
– Pull the cable through the pulley block in a way that the squeezed cable ends ③ face the outside of the frame ① and the plastic loop ④ faces the inside of the frame ②.

- Pull the squeezed cable ends ③ through the pulley block (fig. 7.3 - 27).
- Make sure the cable has been laid correctly.
- Pull the cable through the pulley block until the two ends are of equal length (fig. 7.3 - 28).
- Insert the cable locks into both sides of the pulley block seat (fig. 7.3 - 29).

## 7. Installation of the sectional door

**Attention:**

Fully insert the cable locks up to the limit stop in the pulley block seat (fig. 7.3 - 30).

- Pull the spring assembly until approximately 10 mm of bolt (A) protrudes from the bore hole at the end of the rail (fig. 7.3 - 31).
- Screw the nut onto the bolt protruding from the rail (fig. 7.3 - 32).
- Screw the nut as far as necessary until all the threads engage.

**Note:**

This nut is later used to set the spring tension at the door.

**GB**

## 7. Installation of the sectional door

### 7.4 Mounting the rails to the frame

#### 7.4 - a Preparing the upper rails



**Note:**

The following figure shows installation on the inside on the right. Installation on the inside on the left has to be carried out laterally reversed.

- Insert the rollers and the spacers into the frame brackets on the right and left-hand side (fig. 7.4 - 1).
- Secure the bolt with spring pin (A).
- Place a black plastic curved rail on the right and left-hand rail (fig. 7.4 - 2).



**Attention:**

When fixing, the bolt has to be inserted from the inside into the curved rail. The respective nut is screwed on from the outside of the curved rail. Otherwise the screw fitting could block door travel later on.

- Tighten the nuts and bolts of the curved rail (fig. 7.4 - 3).

#### 7.4 - b Attaching the upper rail



**Attention:**

When fixing, the bolt has to be inserted from the inside into the curved rail. The respective nut is screwed on from the outside of the curved rail. Otherwise the screw fitting could block door travel later on.

- Fix the pre-assembled curves with just one bolt to the side of the frame brackets (fig. 7.4 - 5).



**Attention:**

Only tighten the bolts slightly at first!

## 7. Installation of the sectional door

### 7.4 - c Attaching the upper cross strut

**GB**

- Screw the cross strut connectors to the ends of the strut on both sides.  
For this, insert the pin of the connector into the small bore hole in the strut (fig. 7.4 - 6).
- Screw the cross strut to the end of the hanging rails (fig. 7.4 - 7).

**Note:**

The cross strut may have to be remounted if an electric drive is retrofitted.  
See point 7.12 for the required remounting steps.

## 7. Installation of the sectional door

### Cable sleeves to be used for 115 mm headroom version

Cable sleeve to be used for 40 mm panel thickness (fig. 7.5 - 1)																	
H/B	2000	2250	2375	2500	2625	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000	5250	5500
1875	1	1	2	2	2	1	1	3	3	3	3	1	1	1	3	3	3
2000	1	1	2	2	2	1	1	3	3	3	3	1	1	1	3	3	3
2125	1	1	2	2	2	4	4	2	2	2	2	1	1	1	3	3	2
2250	1	1	2	2	2	4	4	2	2	2	2	1	1	1	3	2	2
2375	4	4	1	1	1	1	1	1	4	4	1	1	1	1	4	4	4
2500	4	1	1	1	1	1	1	1	4	4	1	1	1	1	4	4	4
2625	3	3	3	3	3	3	3	3	3	3	1	3	3	3	3		
2750	3	3	3	3	3	3	3	3	3	3	1	3	3	3	3		
2875	1	1	1	1	1	1	1	1	2	1	2	1	1				
3000	1	1	1	1	1	1	1	1	2	1	2	1	1				

Cable sleeve to be used for 20 mm panel thickness (fig. 7.5 - 1)																	
H/B	2000	2250	2375	2500	2625	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000	5250	5500
1875	1	1	1	2	2	3	1	1	3	3	3	3	3	1	1		
2000	1	1	1	2	2	3	1	1	3	3	3	3	3	1	1		
2125	1	1	1	2	2	2	1	1	4	2	2	2	2	2	1		
2250	1	1	1	2	2	2	1	1	4	2	2	2	2	2	1		
2375	4	4	4	1	1	1	1	1	1	4	1	1					
2500	4	4	4	1	1	1	1	1	1	4	1						
2625	3	3	3	3	3	3	3	3	3	3							
2750	3	3	3	3	3	3	3	3	3	3							
2875	2	1	1	1	1	1	1	1	1								
3000	2	1	1	1	1	1	1	1									

Cable sleeves to be used for aluminium profiles (fig. 7.5 - 1)																	
H/B	2000	2250	2375	2500	2625	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000	5250	5500
1875	1	1	1	1	2	3	1	1	3	3	3	3	3	1	3		
2000	1	1	1	1	2	3	1	1	3	3	3	3	3	1	3		
2125	1	1	1	1	2	2	1	1	3	2	2	2	2	1	3		
2250	1	1	1	1	2	2	1	1	3	2	2	2	2	1	3		
2375	4	4	4	1	1	1	1	1	1	4	1	1					
2500	4	4	4	1	1	1	1	1	1	4	1						
2625	3	3	3	3	3	3	3	3	3	3							
2750	3	3	3	3	3	3	3	3	3	3							
2875	2	1	1	1	1	1	1	1	1								
3000	2	1	1	1	1	1	1	1									

H = Height / B = Width

## 7. Installation of the sectional door

### Cable sleeves to be used for 240 mm headroom version

GB

Cable sleeve to be used for 40 mm panel thickness (fig. 7.5 - 1)																	
H/B	2000	2250	2375	2500	2625	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000	5250	5500
1875	1	1	2	2	2	1	1	3	3	3	3	1	1	1	3	3	3
2000	1	1	2	2	2	1	1	2	2	2	2	1	1	1	3	3	2
2125	1	1	2	2	2	1	1	2	2	2	2	1	1	1	3	2	2
2250	4	4	1	1	2	1	1	1	4	1	1	1	1	1	4	4	4
2375	4	1	1	1	1	1	1	1	4	1	1	1	1	1	4	4	4
2500	3	3	3	3	1	3	3	3	3	3	3	3	3	3	3	4	4
2625	3	3	3	3	3	3	3	3	3	3	1	3	3	3			
2750	1	1	1	1	3	1	1	1	2	2	2	1	1	3	3		
2875	1	1	1	1	1	1	1	1	2	1	2	1	1				
3000	1	1	1	1	1	1	1	1	2	1	2	1	1				

Cable sleeve to be used for 20 mm panel thickness (fig. 7.5 - 1)																	
H/B	2000	2250	2375	2500	2625	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000	5250	5500
1875	1	1	1	2	2	3	1	1	3	3	3	3	3	1	1		
2000	1	1	1	2	2	2	1	1	4	2	2	2	2	1	1		
2125	1	1	1	2	2	2	1	1	4	2	2	2	2	1	1		
2250	4	4	4	1	1	1	1	1	1	4	1	1	1	1	2		
2375	4	4	4	1	1	1	1	1	1	4	1	1					
2500	3	3	3	3	3	3	3	3	3	3	3						
2625	3	3	3	3	3	3	3	3	3	3							
2750	2	1	1	1	1	1	1	1	1	1							
2875	2	1	1	1	1	1	1	1	1								
3000	2	1	1	1	1	1	1	1									

Cable sleeves to be used for aluminium profiles (fig. 7.5 - 1)																	
H/B	2000	2250	2375	2500	2625	2750	3000	3250	3500	3750	4000	4250	4500	4750	5000	5250	5500
1875	1	1	1	1	2	1	1	1	3	3	3	3	3	1	3		
2000	1	1	1	1	2	2	1	1	3	2	2	2	2	1	3		
2125	1	1	1	1	2	2	1	1	3	2	2	2	2	1	3		
2250	4	4	4	1	1	1	1	1	1	4	1	1	1	1	2		
2375	4	4	4	1	1	1	1	1	1	4	1	1					
2500	3	3	3	3	3	3	3	3	3	3	3						
2625	3	3	3	3	3	3	3	3	3	3							
2750	2	1	1	1	1	1	1	1	1	1							
2875	2	1	1	1	1	1	1	1	1								
3000	2	1	1	1	1	1	1	1									

## 7. Installation of the sectional door

### 7.5 Mounting the cables

#### 7.5 - a Laying the cables



**Attention:**

Lay the cables straight and ensure that they are not twisted.  
The door will not open and close correctly if it has been installed incorrectly.  
The cable may break.

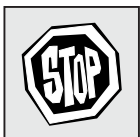
- Make sure the cables have been laid correctly.



**Note:**

The cables used can have up to 4 cable sleeve pairs.  
The example displays the situation when cable sleeve ① has to be used (fig. 7.5 - 1).

- See the tables above to discover which sleeves should be used.
- Insert the determined sleeves into the cable support at the frame (fig. 7.5 - 2).
- Use the black plastic stop to secure the cables in the frame (fig. 7.5 - 3).



**Caution:**

When the cable is pulled over the pulley block a counterforce is created due to the spring tension. The cable has to be secured.

- Feed the other end of the cable over the pulley block (fig. 7.5 - 4).
- Pull the cable to the first installation bracket.
- Insert the bolt through the loop and the bore hole in the installation bracket / frame (fig. 7.5 - 5).
- Fix the bolt with the nut (fig. 7.5 - 5).
- Install the opposite side as described above (fig. 7.5 - 1 to 7.5 - 5).



## 7. Installation of the sectional door

### 7.5 - b Mounting the spring duct cover (2 and 3-spring assembly)

**GB****Attention:**

Before covering the spring duct please ensure that

- the cables are not twisted
- the cables run smoothly
- the cable ends are fixed
- the spring duct is free from dust and dirt.

- Place the cover onto the spring duct starting from the side of the cross strut connection, so that the entire length of the spring duct is covered (fig. 7.5 - 6 and 7.5 - 7).
- Push the cover onto the spring duct until it engages.  
The profile of the cover has to fit into the profile of the spring duct (fig. 7.5 - 8).

### 7.5 - c Mounting the spring duct cover (4-spring assembly)

**Attention:**

Before covering the spring duct please ensure that

- the cables are not twisted
- the cables run smoothly
- the cable ends are fixed
- the spring duct is free from dust and dirt.

- Screw the cover onto the spring duct using the holes provided (fig. 7.5 - 9).

## 7. Installation of the sectional door

### 7.6 Mounting the rails to the ceiling

#### 7.6 - a Attaching and aligning the upper rails



**Attention:**

- Make sure that the frame assemblies are not tilted while being raised.
- The lateral rails and the cross strut have to be aligned exactly horizontally.

- Raise the screwed frame assemblies at the same time and support them (fig. 7.6 - 1).
- Align the cross strut horizontally (fig. 7.6 - 2).
- Align the runner rails horizontally (fig. 7.6 - 3).
- Tighten the pre-assembled bolt between the frame and rail (fig. 7.6 - 4).
- Screw the left and right-hand plastic curved rail (torx T20) to the frame using one screw (fig. 7.6 - 5).

#### 7.6 - b Mounting the lower curved rail

- Insert the curved rail on right and left-hand side between the vertical and horizontal rails (fig. 7.6 - 6).



**Attention:**

When fixing, the bolt has to be inserted from the inside into the curved rail. The respective nut is screwed on from the outside of the curved rail. Otherwise the screw fitting could block door travel later on

- Tighten the nuts and bolts of the curved rail (fig. 7.6 - 7 and 7.6 - 8).
- Align the runner rail joint until it is flush (fig. 7.6 - 7 and 7.6 - 8).



**Note:**

Use pliers to smooth out any joints which might obstruct door travel.

## 7. Installation of the sectional door

GB



### Attention:

The runner rails have to be aligned in parallel with each other to guarantee correct door travel.



### Note:

The runner rails are aligned correctly if both diagonal measurements have the same length. To achieve an exact measurement, use the same measuring points for each diagonal measurement.

- Measure the diagonal lengths and align the runner rails parallel with each other (fig. 7.6 - 9).

### 7.6 - c Mounting the suspensions to the runner rails



### Attention:

Prior to mounting the suspension, the door has to be aligned as described above (see fig. 7.6 - 9).

### Legend (fig. 7.6 - 10):

- Ⓐ Suspension
- Ⓑ Suspension for mounting version 1
- Ⓒ Suspension for mounting version 2



### Attention:

- It is absolutely essential that the suspensions Ⓐ are mounted.
- Three suspensions have to be attached to each side.



### Note:

Normally suspension Ⓐ has to be used. This suspension is described below. Suspension Ⓓ is used for the special case of "insufficient sideroom" (fig. 7.6 - 11).

- Make sure which suspension suits your requirements.
- Hold the suspension together with the installation bracket to determine the required length. Mark any extra length of the suspension projecting from the frame (fig. 7.6 - 12).

## 7. Installation of the sectional door

**Note:**

To ensure maximum runner rail stability, the suspension should project slightly, or be at least flush with the lower edge of the horizontal frame.

- Saw off any projecting length at the marked position (fig. 7.6 - 13).

**Caution:**

To avoid injuries, screw the installation bracket to the sawn off end of the suspension.

- Screw the installation bracket to the suspension (fig. 7.6 - 14).

**Attention:**

Please ensure that the spring duct is covered prior to drilling.

- Hold the pre-assembled suspension to the runner rail and mark the drilling spot. Drill at least 60 mm into the ceiling – drill diameter 10 mm (fig. 7.6 - 15).

**Attention:**

When fixing, the bolt has to be inserted from the inside into the curved rail. The respective nut is screwed on from the outside of the curved rail. Otherwise the screw fitting could block door travel later on.

- Laterally screw the suspension to the runner rails (fig. 7.6 - 16).
- Insert the plug into the drilled hole and screw the suspension to the ceiling (fig. 7.6 - 17)
- Mount all further suspensions as described above (fig. 7.6 - 12 - 7.6 - 17).

## 7. Installation of the sectional door

### Mounting for the special case of "insufficient sideroom"

**GB**

- Screw the runner rails to the suspensions ④ (fig. 7.6 - 18).

**Note:**

In order to laterally stabilise the door it is necessary to mount a wall strut or a lateral ceiling strut.

### Mounting version 1 (fig. 7.6 - 10)

- If the length of the suspension allows a wall strut on the right or left-hand side of the wall, mount suspension ② (fig. 7.6 - 10 and 7.6 - 19).
- Adjust the clearance from the wall using the telescopic function (Fig. 7.6 - 19).

### Mounting version 2 (fig. 7.6 - 10)

- If the length of the suspension does not allow a wall strut on the right or left-hand side of the wall, mount suspension ③ (fig. 7.6 - 10 and 7.6 - 20).

## 7. Installation of the sectional door

### 7.7 Mounting the door sections

#### 7.7 - a Preparing the bottom door section

All the sectional door panels are covered with a protective film. Depending on the height of the panel, this film may also be in the area around the rounded edge (A).

- Remove the protective film from around the rounded edge prior to assembling the panels (fig. 7.7 - 2).



**Note:**

Please leave the protective film on the outside surface of the panel until the door is fully mounted.



**Note:**

The side sticker "Bodensection" (bottom section) and the shortened end caps help you to recognise the bottom door section (fig. 7.7 - 3 and 7.7 - 4).

- Place the bottom door section ready for installation, if possible, on the trestles (fig. 7.7 - 1).
- Insert the bottom door section profile onto the bottom door section (fig. 7.7 - 4).  
4 versions of the bottom door section profile are available:  
0 mm, 9 mm, 17 mm, 32 mm (fig. 7.7 - 5)
- Screw the bottom door section profile in the middle to the bottom door section.
- In case of manually operated doors, please attach the optional handle (fig. 7.7 - 6).
- Place the bottom section in the centre of the door opening.
- Insert the roller into the bottom bracket (only 2 and 3 spring system).
- Slide the roller together with the bottom bracket into the runner rail.  
(only 2 and 3 spring system).



**Attention:**

Do not drill through the door leaf (max. depth 25 mm)!

## 7. Installation of the sectional door

GB

- Hold the bottom bracket to the inside of the door leaf in a way that the bore holes in door leaf match the four lower bore holes in the bottom bracket.
- Mark the drilling spots for the upper screwing fittings.
- Drill the holes. Drill diameter 4.5 mm:  
2 and 3 spring system (fig. 7.7 – 7)  
4 spring system (fig. 7.7 – 8)
- Screw the bottom bracket to the bottom door section:  
2 and 3 spring system (fig. 7.7 – 9)  
4 spring system (fig. 7.7 – 10)



### Note for 4 spring duct:

When using the 4 spring duct, the door has to be aligned in the middle between the runner rails with spacer rings (max 8 rings – fig. 7.7 - 11).

- Insert the roller into the roller holder (only 4 spring system, fig. 7.7 - 11).
- Insert the roller into the runner rail and screw the roller holder onto the bottom bracket (only 4 spring system, fig. 7.7 - 12).
- Follow these steps to mount the bottom bracket to the bottom section on both sides.



### Attention:

To lighten the bottom door profile, use shims to support the bottom section.

- Place blocks of wood underneath both sides of the bottom bracket:  
2 and 3 spring system (fig. 7.7 – 13)  
4 spring system (fig. 7.7 – 14)
  - The blocks of wood should be high enough to ensure that the bottom door profile is not crushed.
  - After shimming, the door leaf has to be horizontally level and level with the upper edge of the finished floor OFF.

## 7. Installation of the sectional door

### 7.7 - b Mounting further door sections



#### Caution:

The sections could fall down as long as they are not attached to the previous section and the roller holders have not been mounted.

- Secure every new section placed into the opening.
- Place the section with the type plate onto the bottom section (fig. 7.7 - 15).
- Insert the rollers into the roller holders:
  - 2 and 3 spring system (fig.7.7 - 16)
  - 4 spring system (fig. 7.7 - 17)



#### Note for headroom version 240 mm only:

Now mount the handle.

The installation instructions are in the handle pack.



#### Attention:

Do not drill through the door leaf (max. depth 25 mm)!

- Insert the roller with the roller holder into the runner rail (only 2 and 3 spring system).
- Screw the roller holders to the door leaf via the pre-drilled holes (only 2 and 3 spring system, fig.7.7 - 18).
- Drill the hole for the bottom screw fitting (drill diameter 4.5 mm, only 2 and 3 spring system, fig.7.7 - 18).
- Screw the roller holder to the bottom screw fittings (only 2 and 3-spring system, fig.7.7 - 18).
- Screw the lateral hinges to the door leaf at the pre-drilled bore holes (only 4-spring system, fig. 7.7 - 19)
- Insert the roller into the runner rail and screw the roller holder to the lateral hinge (only 4-spring system - fig. 7.7 - 20).



## 7. Installation of the sectional door

**GB****Attention:**

Ensure that there is a space of 0,8 mm between the door sections to guarantee correct door travel!

- Screw the sections in the centre of the door leaves (fig. 7.7 - 21).
- Check whether the door is aligned horizontally (fig. 7.7 - 22).

**Note:**

To align the door horizontally, you can adjust the height of the wooden blocks (see fig. 7.7 - 13 and 7.7 - 14).

- Mount all further sections, except the top section (with sticker top section), as described above (fig. 7.7 - 15 to 7.7 - 22).

**Note:**

Mounting of the top section is described on the following pages.

## 7. Installation of the sectional door

### 7.7 - c Mounting the upper door section (top section)



**Note:**

The seal at the upper door section has to be replaced with the supplied seal! You can recognise the upper door section via the lateral sticker "top section".

- Position the top door section ready for installation, if possible, on the trestles (fig. 7.7 - 23).
- Remove the pre-assembled seal from the upper end (fig. 7.7 - 23).



**Attention:**

The plastic profile has to snap into the groove, so that plastic profile and profile of door sections fit exactly together (fig. 7.7 - 24).

- Insert the supplied plastic profile into the groove at the upper end (fig. 7.7 - 24 and 7.7 - 25).
- Place the emergency release housing (A) from the outside through the provided opening in the top section (fig. 7.7 - 26).
- Screw the housing (A) to the counter plate (B) (fig. 7.7 - 26).
- Mount the cover plate (C) on top of the emergency release housing (fig. 7.7 - 27).



**Note:**

Shortened top sections are supplied for special door sizes. In this case, there is no need to replace the plastic profile.

The top section of special door sizes is rounded off with an aluminium profile (D) (fig. 7.7 - 28).

- Place the top section onto the previous section and attach it as described above (see fig. 7.7 - 15 to 7.7 - 22).

## 7. Installation of the sectional door

GB



### Attention:

The roller support plate which is to be screwed on has to be flush with the outside of the upper door section.

- Release bolts Ⓐ (fig. 7.7 - 29).
- Insert the roller of the upper roller holder into the black plastic curved rail.
- Screw the roller holding plates onto the right and left-hand side of the upper door leaf (fig. 7.7 - 30).



### Note only for headroom version 240 mm:

For the special case of headroom version 240 mm, the lower drilling template has to be used to mount the roller holding plate (fig. 7.7 - 31).

- Align the roller in the upper curved rail as follows (fig. 7.7 - 32):

### Position 1:

For doors **with** an electric drive =  
Roller is on TOP in the curved rail.

### Position 2:

For doors **without** an electric drive (manual operation) =  
Roller engages just behind the vertical curved rail section.



### Attention:

If you wish to retrofit an electric drive, you have to change the position of the roller to position 1.

- Ensure that the space between the roller and the roller holder is 1 – 2 mm along the entire length of the door (fig. 7.7 - 33).
- As soon as you have adjusted your door to the correct position, tighten the bolts Ⓐ (fig. 7.7 - 34).

## 7. Installation of the sectional door



### **Attention:**

- Alignment of the roller holders should only be carried out when the door is closed.
- The locking screws should not be tightened too tightly.

- Align all the roller holders in a way that the rollers are placed in the radius of the runner rails.

### **2 and 3-spring system**

- Release the locking screw of "roller bracket" – 4 mm Allen key (fig. 7.7 - 35).
- Move the roller until it is in the correct position – bracket in the middle, 8 mm Allen key (fig. 7.7 - 35).
- Retighten the locking screw (fig. 7.7 - 35).

### **4-spring system**

- Loosen the M6 nuts (fig. 7.7 – 36).
- Adjust the plastic roller holder until the roller is set correctly (fig. 7.7 – 36).
- Retighten the M6 nuts (fig. 7.7 – 36).

## 7. Installation of the sectional door

### 7.8 Mounting the cables to the door leaf

**GB**

**Attention:**

The door is not yet under spring tension.  
The force required to open the door is not supported by spring tension.

- Open the door carefully up to end position (fig. 7.8 - 1).


**Note:**

The following diagrams always display the right-hand inside of the door.

- Secure the open door on right and left-hand side to the runner rail using screw clamps (fig. 7.8 - 2).


**Attention:**

You must have free access to the bolt at bottom bracket (fig. 7.8 - 3).


**Caution:**

The cable is under tension due to the spring.

- Hold the cable firmly.
- Do not release the cable until it has been secured.
- Remove the screw on installation bracket / frame (fig. 7.8 - 4).
- Place the cable loop onto the lateral receiver at the bottom bracket.
- Secure the cable loop with an SL securing device (fig. 7.8 - 5).


**Note:**

The steps have to be carried out laterally reversed on the other side of the door side (see fig. 7.8 - 2 to 7.8 - 5).

## 7. Installation of the sectional door



### **Caution:**

Make sure that the cable loop is secured before removing the screw clamps.

- Now remove the screw clamps (see fig. 7.8 - 2).
- Remove the blocks of wood (see fig. 7.7 - 8).

### 7.9 Setting the spring tension

- Close the door and test the spring tension (fig. 7.9 - 1).



### **Attention:**

- Spring tension should only be changed when the door is open.
- Both sides should always have the same tension.
- When reducing the spring tension, the threaded rod should never be unscrewed from the nut.
- The tension has to be set in away which enables simple up or down travel.
- The cable has to have sufficient initial tension in every door position.
- The cable should always be under tension!

- To increase tension, turn the M8 nut clockwise (fig. 7.9 - 2).

## 7. Installation of the sectional door

### 7.10 Mounting the door link bracket

**GB**

- Mount the door link bracket in the centre of the top door section (fig. 7.10 - 1).

**Note:**

The door link bracket should be screwed on, even if an electric drive has not yet been fitted. The door link bracket is specially designed for this sectional door and should be used if an electric drive is retrofitted.

### 7.11 Mounting the pull cord

**Caution:**

To avoid injuries, never use the cable in connection with an electric drive!  
Always remove an existing cable if an electric drive is retrofitted to the door!

#### For door heights from 2250 mm and higher:

- Insert the pull cord from below through the flap of the bottom bracket and knot the end of the cord (fig. 7.11 - 1).
- Insert the pull cord from the front through the hole in the horizontal frame (fig. 7.11 - 2).
- Pull the cord to the required length and knot the end.

## 7. Installation of the sectional door

### 7.12 Re-mounting the cross strut (optional)

**Note:**

If the rear cross strut does not allow the installation of an electric drive, it can be re-mounted.

**Attention:**

- The door should only be moved after the rear cross strut has been mounted!
- Only dismantle the cross strut when the door is closed!

- Dismount the back cross strut (fig. 7.12 - 1).
- Remove the connectors (A) on both sides of the cross strut (fig. 7.12 - 1).
- Mount the connecting angles to both sides of the cross strut (fig. 7.12 - 2).
- Fix the cross strut to the very last connection in the lower runner rail (fig. 7.12 - 3).

**Attention:**

Do not mount the cross strut further towards the front, since it would block the travel of the door.



## 7. Installation of the sectional door

GB

### 7.13 Testing the door travel



#### Caution:

To avoid injuries, check whether the door is secure:

- Have all installation steps been carried out?
- Have the lateral rails been sufficiently fixed?
- Are the springs on both sides under sufficient tension as described?
- Have the door sections been attached at all the specified positions and has the space of 2 mm between the sections been adhered to?

- Open and close the door manually (fig. 7.13).

**Successful testing of the door should fulfil the following requirements:**

#### 1. The door travels easily.

- If the door does not travel easily, please check:
  - Have all the lateral frames been aligned correctly (see point 7.2 -e)?
  - Have the cables been twisted (see point 7.5)?
  - Have the lateral runner rails been aligned horizontally (see point 7.6 - a)?
  - Has the door leaf been aligned in the centre of the door opening (see point 7.7 - b)?
  - Is the door leaf, when closed, in a horizontal position (see point 7.7 - b)?

#### 2. The door travels to the end positions "Door OPEN" and "Door CLOSED".

- If the door cannot travel to the end position "Door OPEN", please check:
  - Is an object obstructing door travel? Especially check the runner rails.
  - Does the cable run correctly over the pulley blocks on both sides (see point 7.5)?
  - Is the tension of the spring correct (see point 7.9)? The spring tension is possibly too low or too high.

#### 3. The door should stop immediately between the end positions after being released.

- If the door does not stop immediately, please check:
  - If the door carries on opening, reduce the spring tension (see point 7.9).
  - If the door carries on closing, increase the spring tension (see point 7.9).

## 7. Installation of the sectional door

**Attention:**

The protective film on the outside of the sections has to be removed; otherwise strong sunlight will cause it to stick to the sections!

- Remove the protective film from the outside of the sections.

## 8. Maintenance instructions sectional door

Necessary maintenance from points 1 and 3 should only be carried out by people qualified for these tasks.

**GB**

Maintenance should be carried at least every 12 months.

### **Maintenance points:**

1. Check the steel cables for fractures.
2. Check the rollers.
3. Lubricate the hinges and the rollers.
4. If necessary, re-tension the springs.
5. Check the springs.
6. Check the roller settings.
7. Check the condition and fixing of all screws and nuts and bolts.
8. Carry out a visible inspection of all the components for fractures and damages