

B43A023004-1 (MIDI, 433 MHz)



B43A024002 (MINI, 433MHz)

B86A023004 (MIDI, 868 MHz)



English

Hand Transmitters SKR433-1 + SFR868

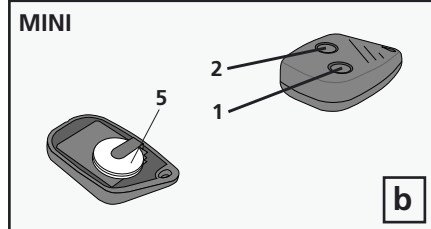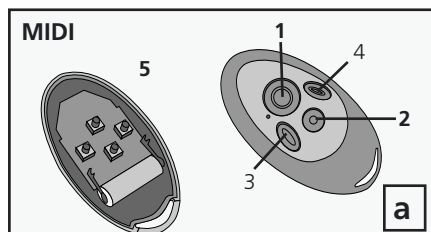

Batteries (5)

MIDI-Transmitter:

One 12V battery is required.
Possible types of batteries: A23, 23A, 23L, EL12, VR 22 and MN 21

MINI-Transmitter:

Two 3V batteries are required.
Possible types of batteries: CR1616 oder DL1616

Old batteries must be disposed as to national regulations!

Situation 1

When you have got a working transmitter and want to use the new transmitter in addition:

1.1.) Open the garage door for at least 50 cm

1.2.) Close the garage door with the existing transmitter

1.3.) You have now got 10 seconds within which you must press the buttons 1+2 on the existing transmitter simultaneously for approx. 3 seconds

1.4.) Release the hand-transmitters buttons once the operators' light starts blinking

1.5.) Take the new transmitter and press the button you want to use for the operator

1.6.) The operators' light stops blinking and the new hand-transmitter is now ready for use

Situation 2

When you do not have a working hand-transmitter:

2.1.) Open the operators housing (one screw needs to be unscrewed)

2.2.) Press the LERN/LEARN button on the electronics for approx. 3 seconds until the operators' light starts blinking

2.3.) Take the new transmitter and press the button which you want to use with the operator

2.4.) The operators' light stops blinking and the new hand-transmitter is now ready for use

Situation 3

When you are using an operator with a MINI-receiver (normally not a Seip operator):

3.1.) The MINI-receiver is usually installed inside the housing of a component. You might have to open the housing to access the MINI-receiver.



3.2.) Take the new transmitter and hold it very close to the MINI-receiver right besides the LED-lamp. Keep the transmitters' button no. 1 pressed until the LED-lamp turns on. Release the transmitters' button and press the button you want to use with the receiver - the LED switches off and the transmitter is now ready for use.

Before you can use your hand-transmitter it must be registered with the receiver.

Situation 1 and 2 describe the registration procedure with the garage door operators TS75 and TS100.

Situation 1

You have got at least one working hand-transmitter and want to register the new transmitter to be used in addition:

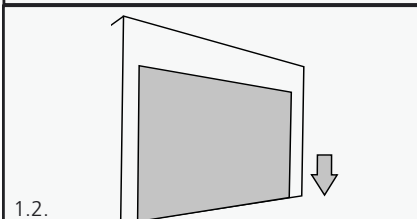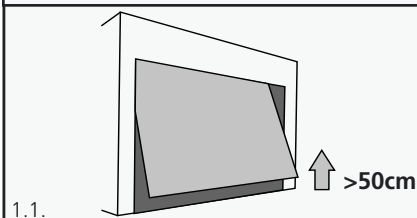


„old“ transmitter


keep pressed
for 3 sec.





Light flashes

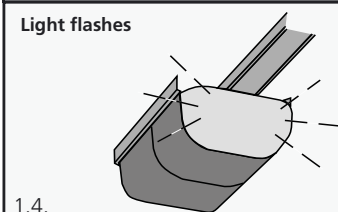


new transmitter

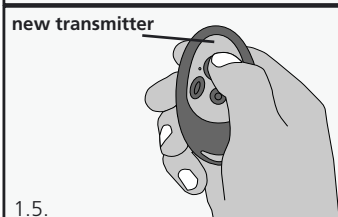**Situation 2**

You do not have a working hand-transmitter:

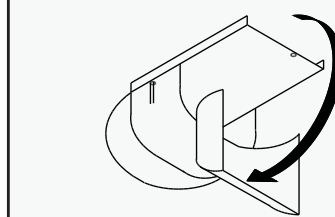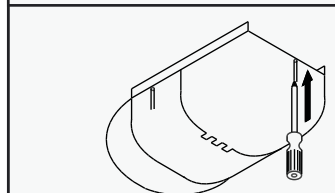


2.1.

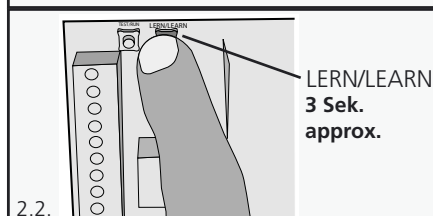


2.2.

Light flashes

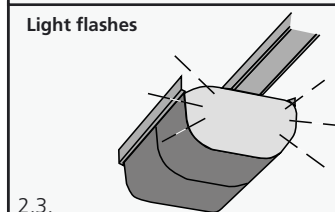

2.3.


new transmitter

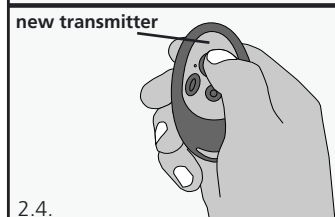


2.4.

Situation 3:

You want to use the new transmitter with a Seip external MINI-receiver (usually for gate-operators, alarmsystems and other non-Seip devices):

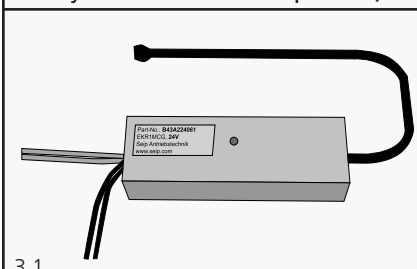

3.1.

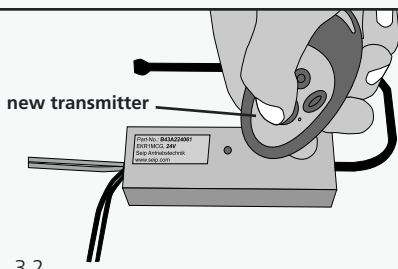

3.2.

CE-Declaration

These products comply with the technical requirements of the European Community. They carry the CE-Label and can be used in all EC-countries and Switzerland without further applications. The declaration of conformity can be found on the internet in the download area at www.seip.com as part of the installation instructions for the garage door operators TS and TM60.

Seip
ANTRIEBS-TECHNIK
www.seip.com