

GARAGE BOTTOM DOOR SEAL FITTING INSTRUCTIONS

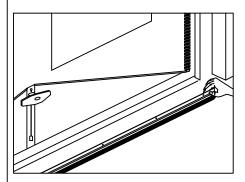


STEP ONE

Select the best position to fix the seal to the bottom inside edge of the door. Pre-drill fixing holes into the seal carrier if required.

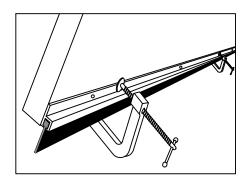


STEP TWO

Hold the aluminium carrier into position with a couple of clamps or fixing tape (another pair of hands may also be useful).

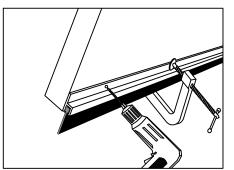


STEP THREE

Once you are happy with the position, mark with a pencil through the holes or using a 2.5mm drill bit, drill through the pre-drilled holes into the door skin whilst still clamped.

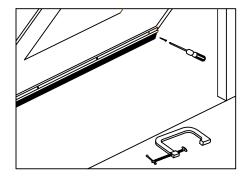


STEP FOUR

Screw in the self tapping screws provided using a cordless drill / screwdriver and remove any clamps.

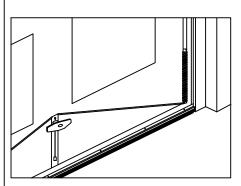

STEP FIVE

Make sure the door shuts correctly, seal may need ends trimming depending on door type or locking mechanism.

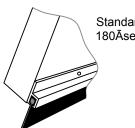

Standard 180Āseal carrier



Some doors require a 90Āseal carrier