




## SeceuroGlide Sectional Plus Fitting Instructions




## Fitter's Information Pack - SeceuroGlide Sectional Plus

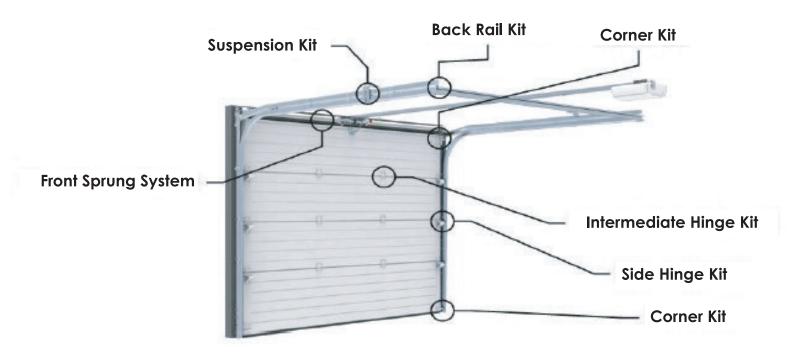


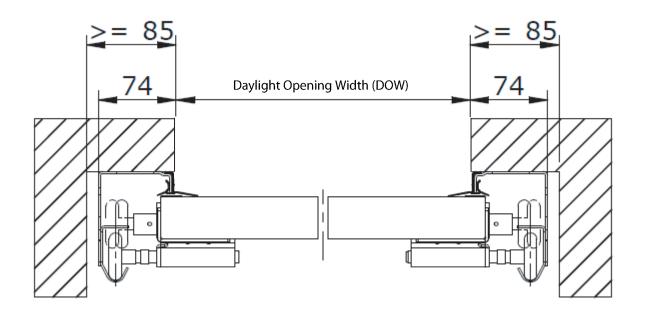


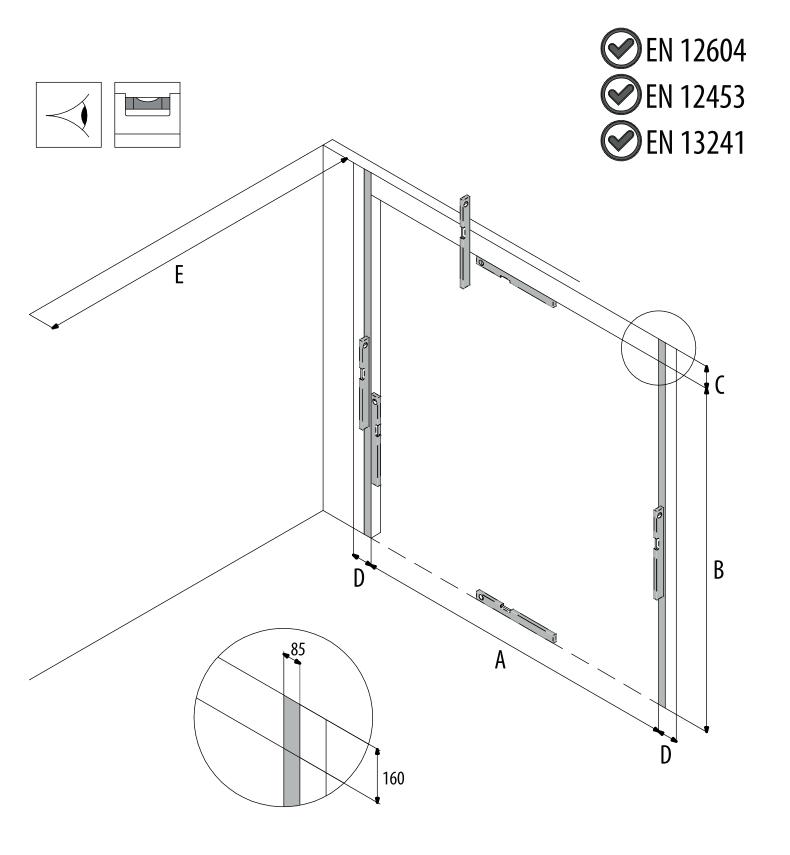



Α	В	С	D	E
DLW	DLH	FHR	FSR	FMD
Daylight Width	Daylight Height	Free Head Room	Free Side Room	Free Mounting Dept

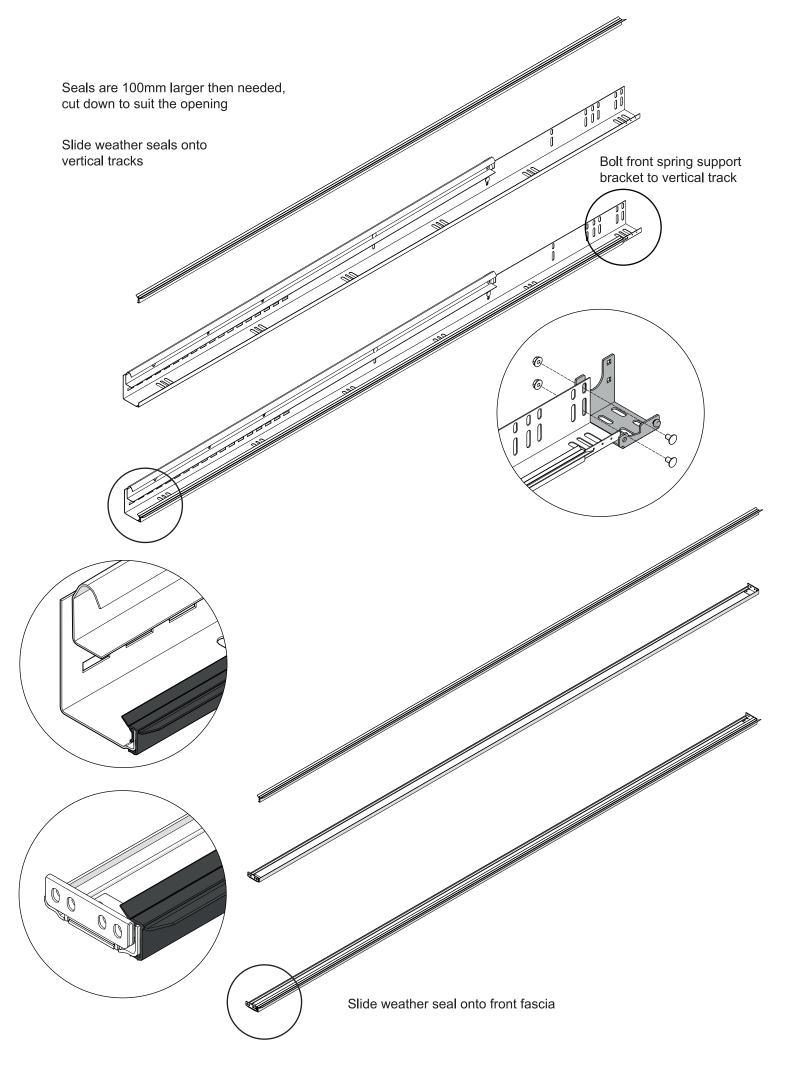


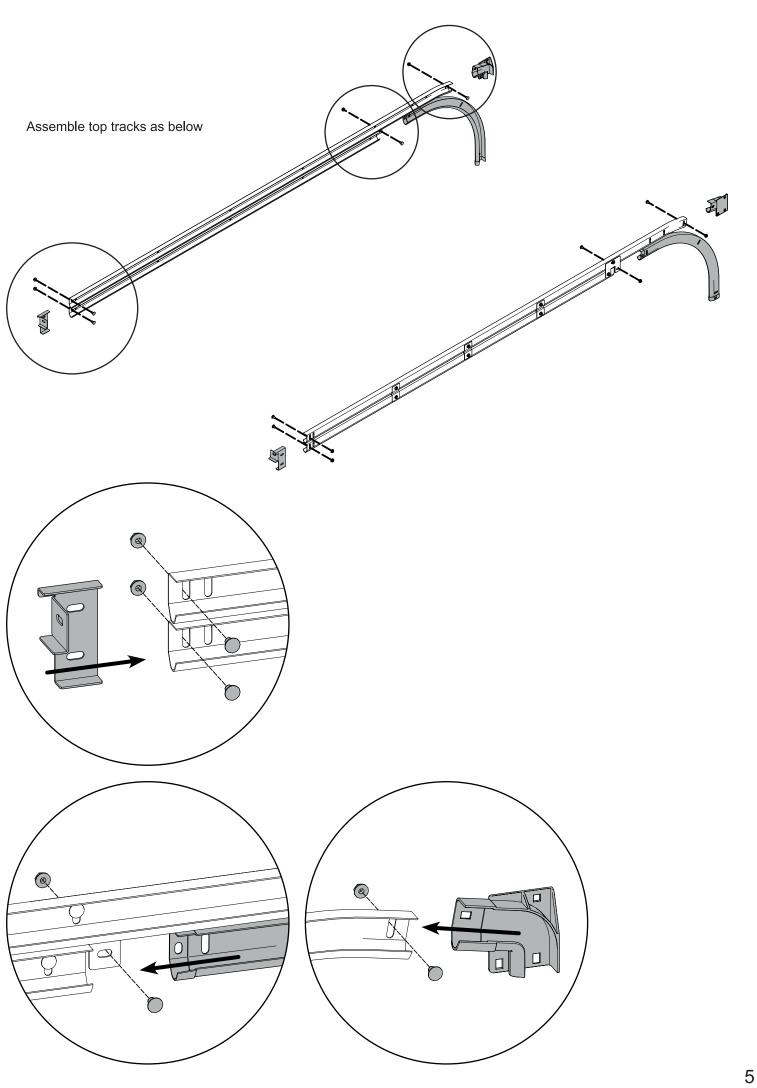


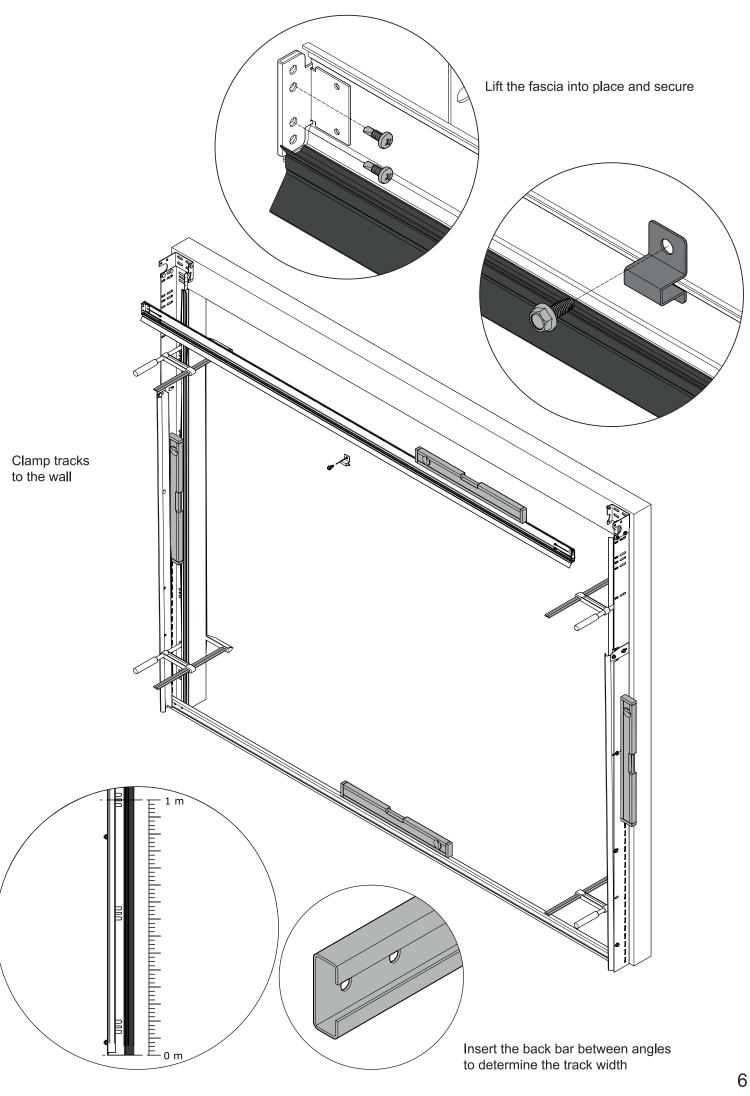


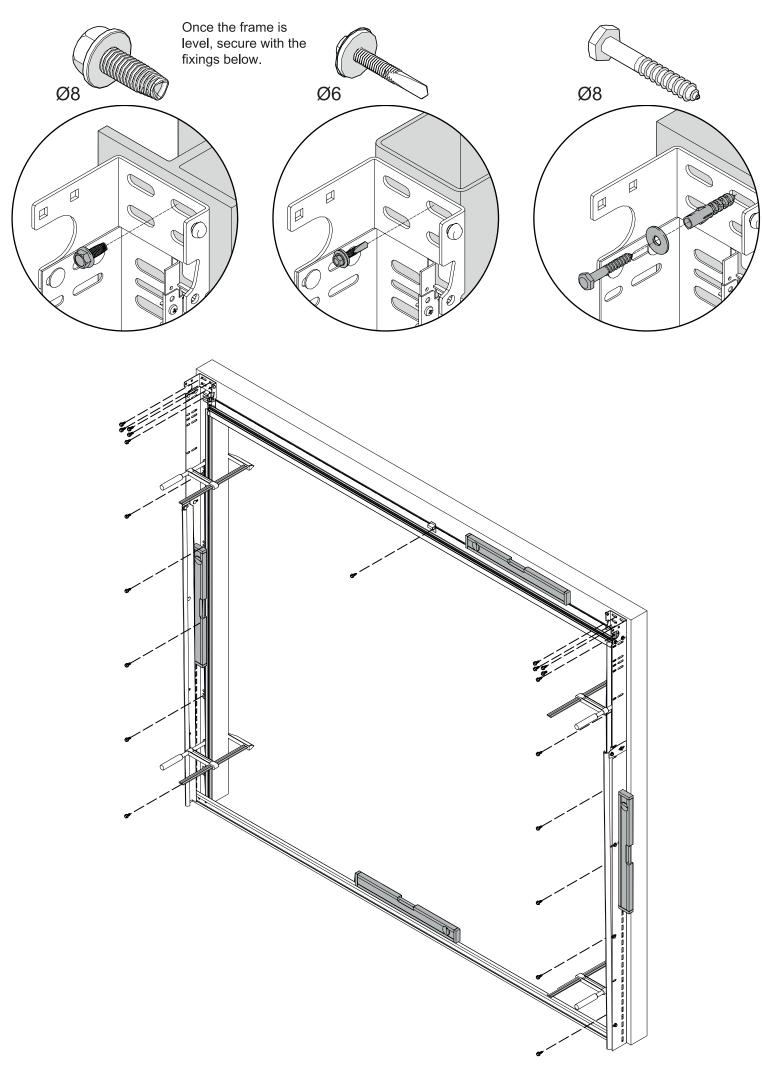

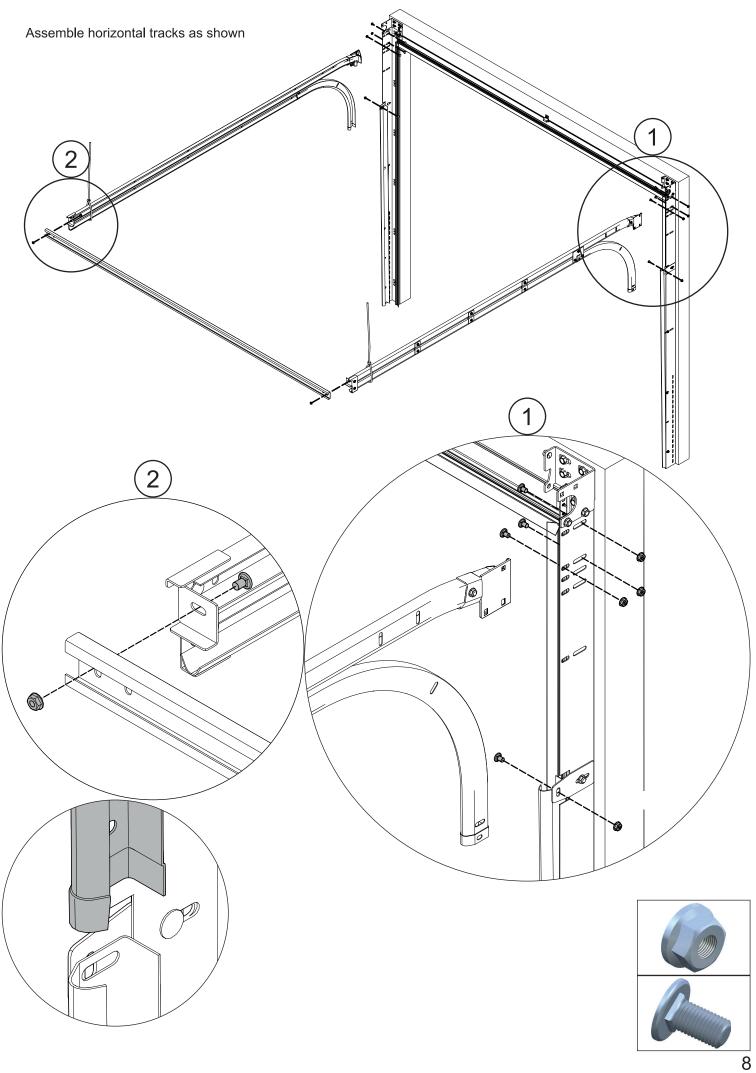


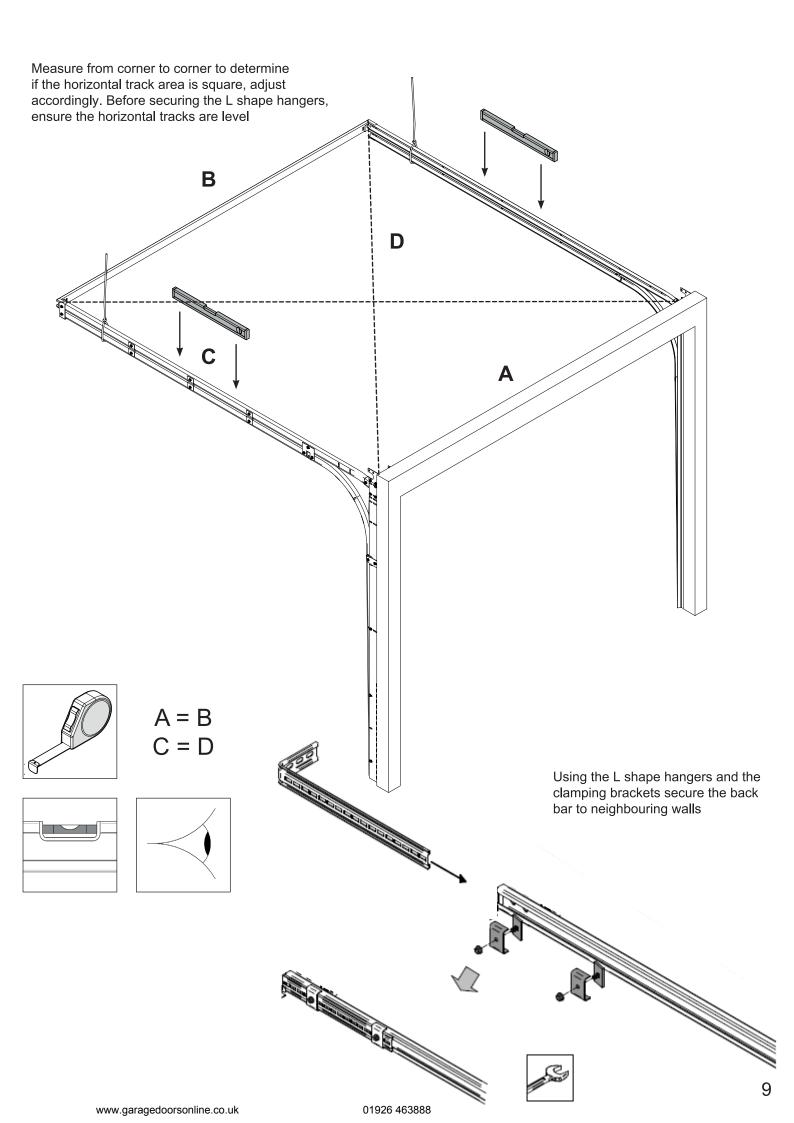


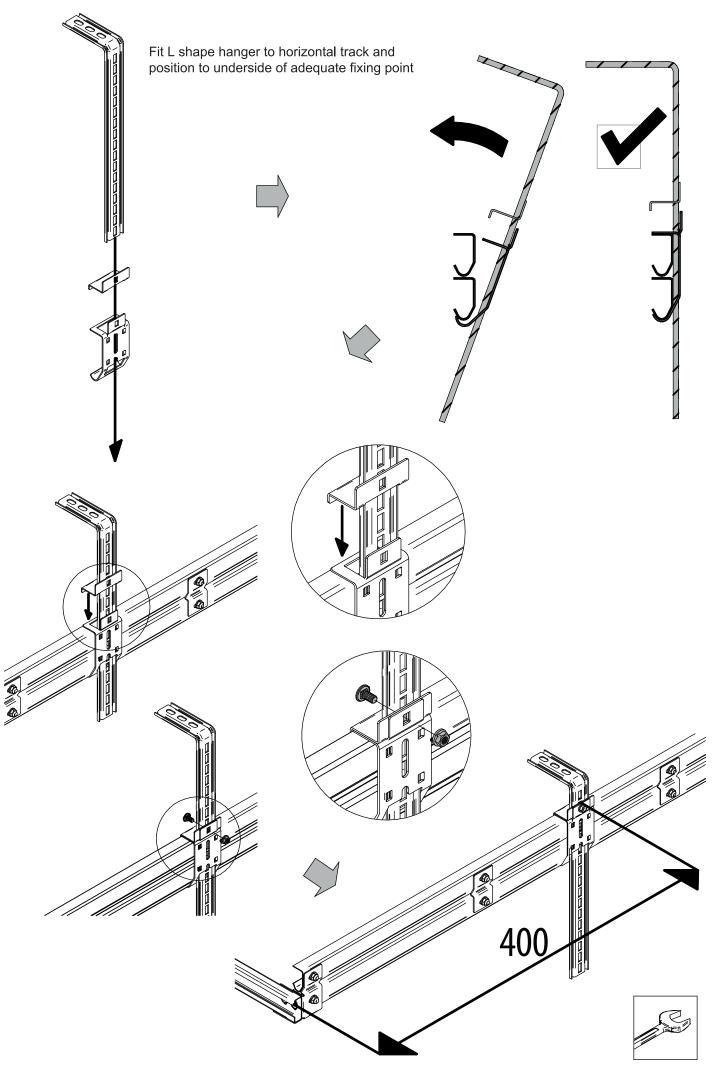


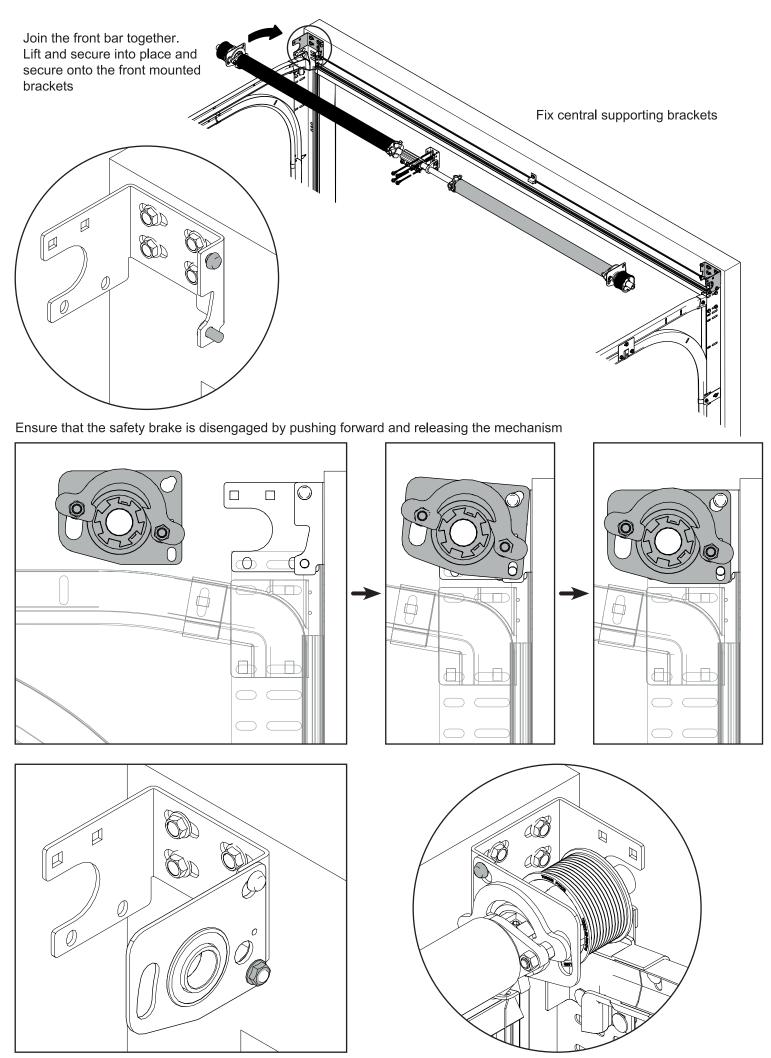


Once the spring mechanism has been fitted, use an M8 nut to secure the components together www.garagedoorsonline.co.uk 01926 463888

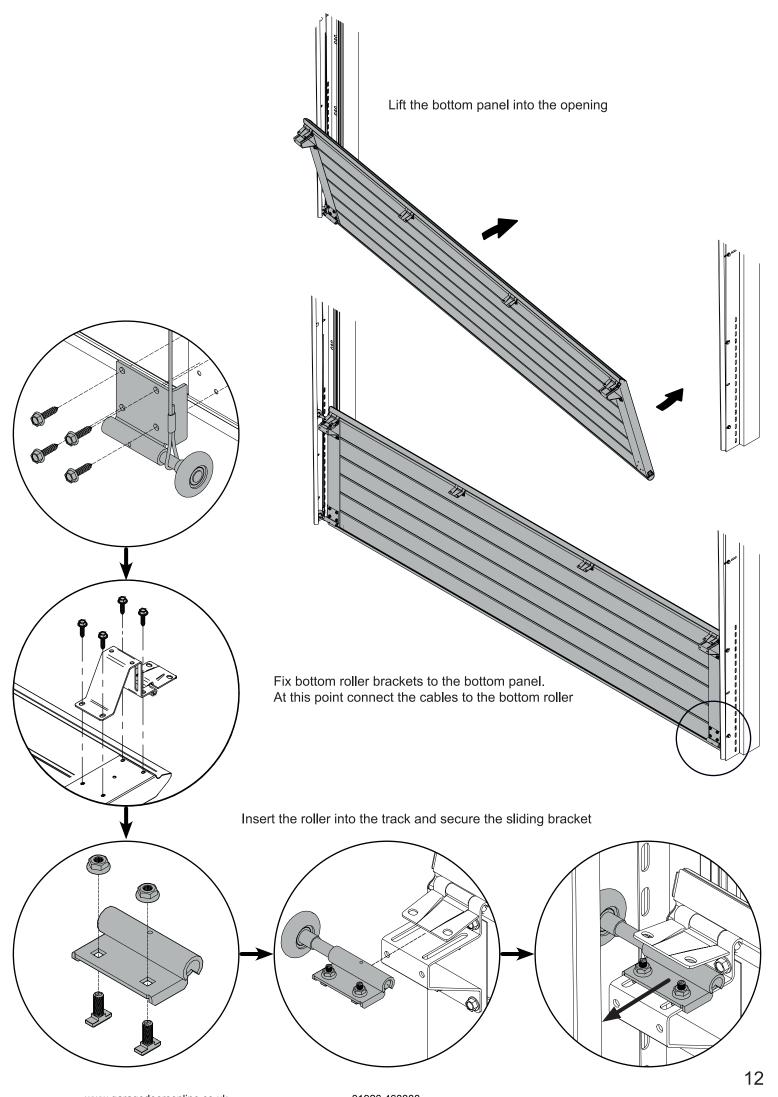


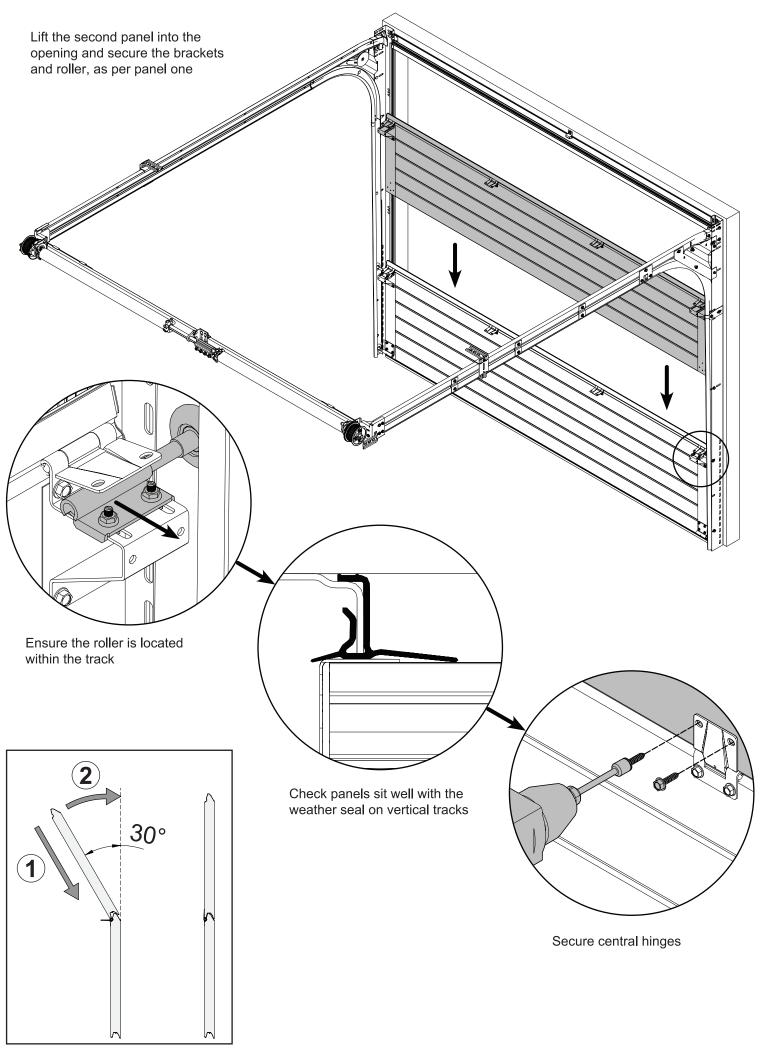


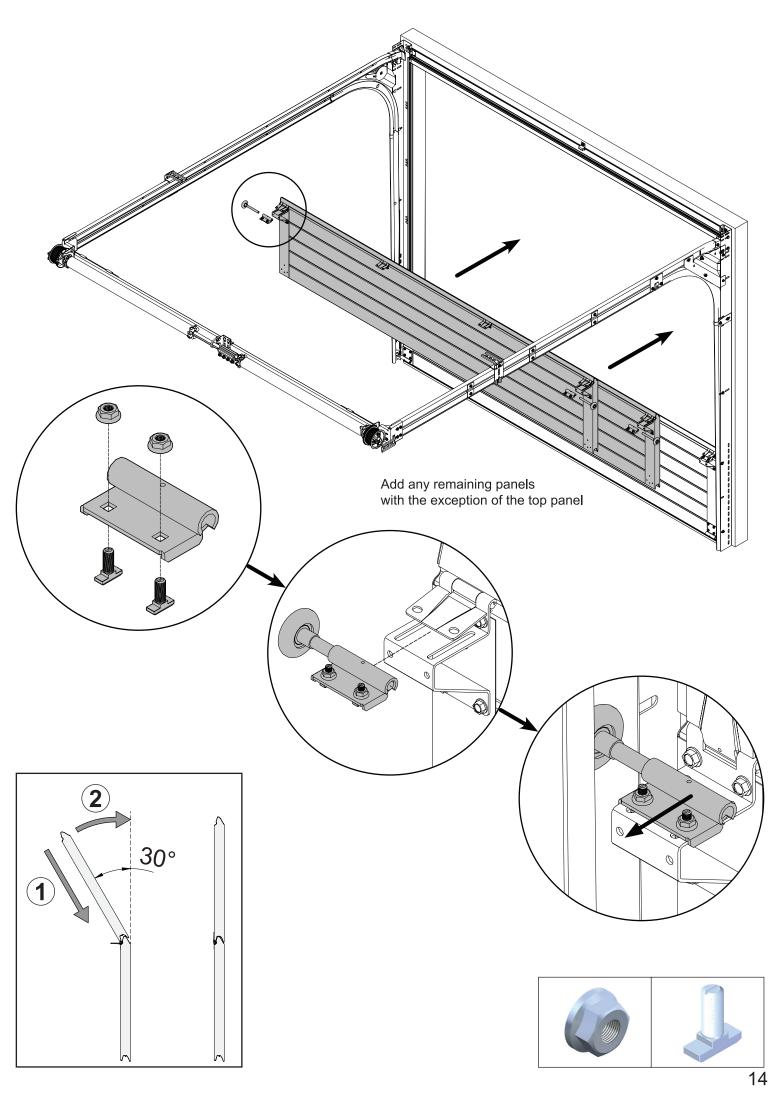


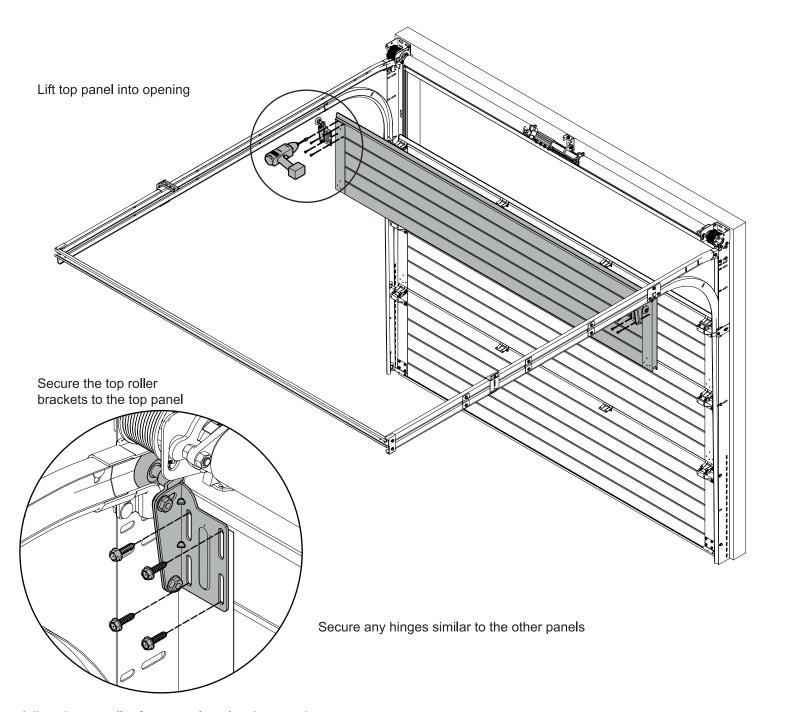



Adjust the top roller for manual or electric operation

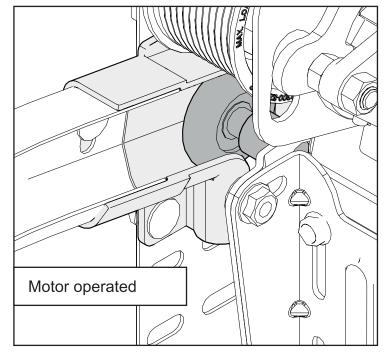


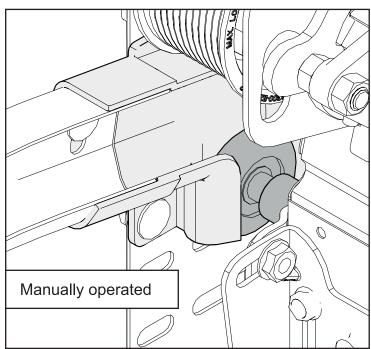

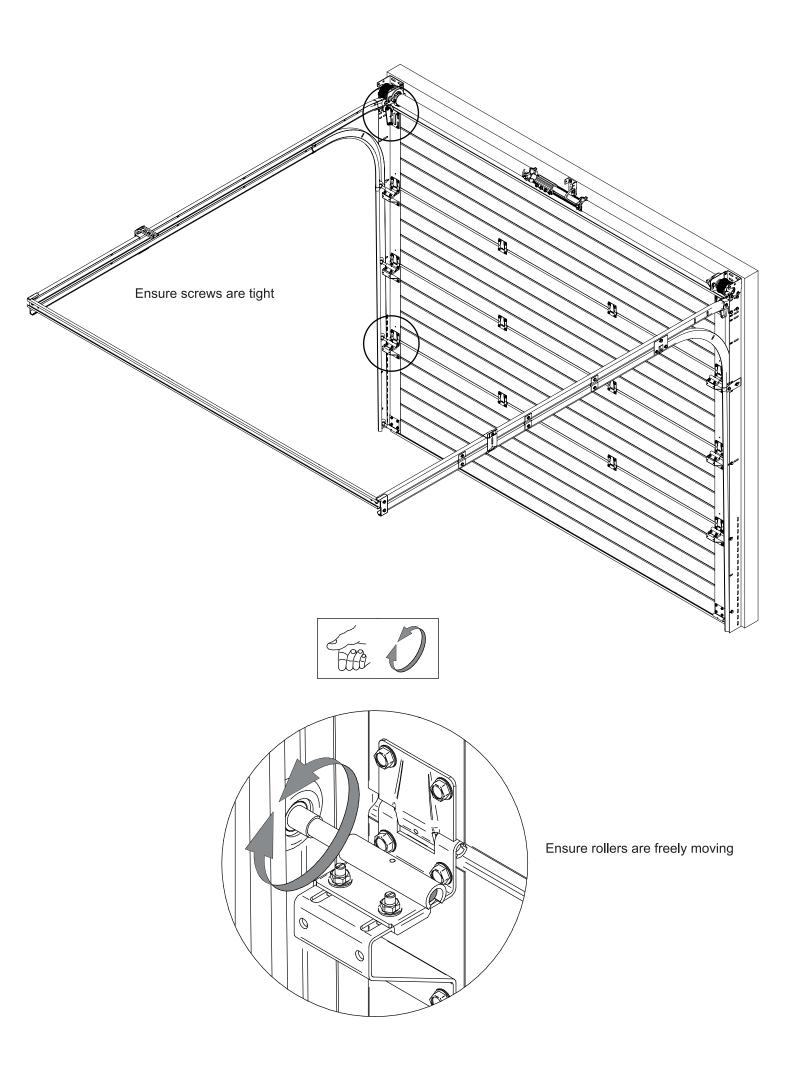

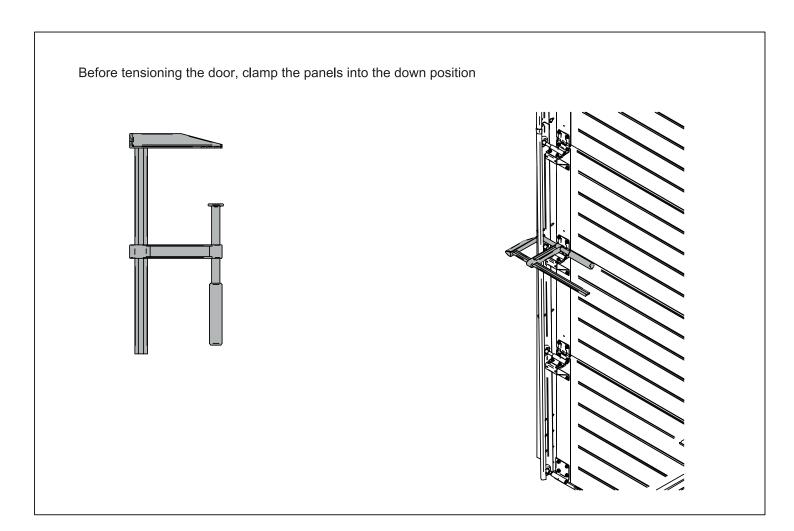


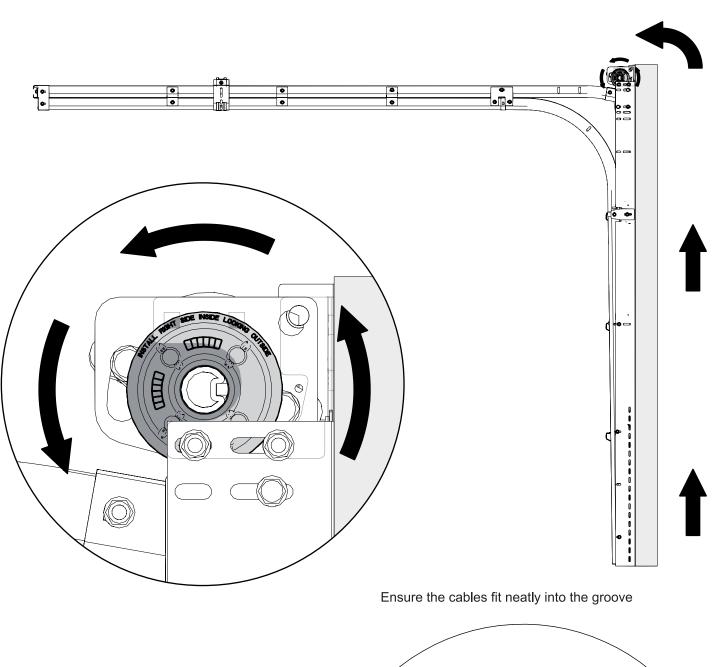

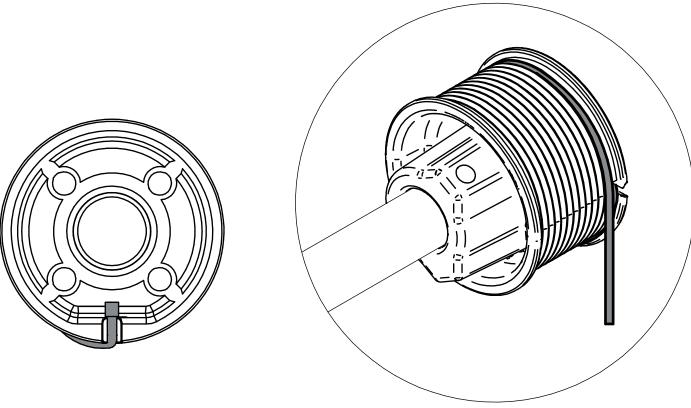



Check paperwork or spring tension label located on the spring for number of turns



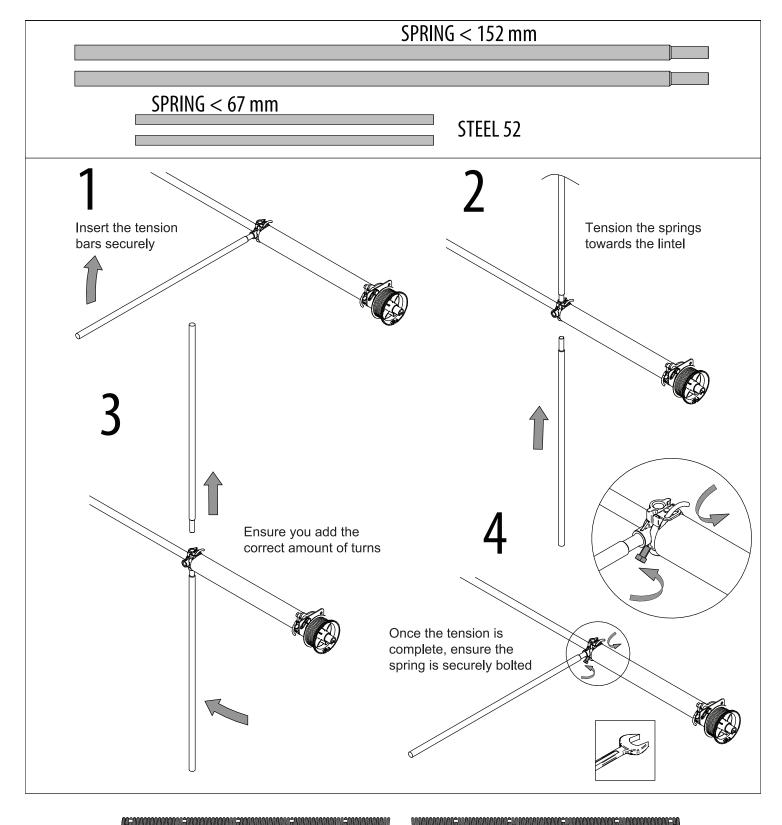


## **EN**: Correct fastening of winding plug

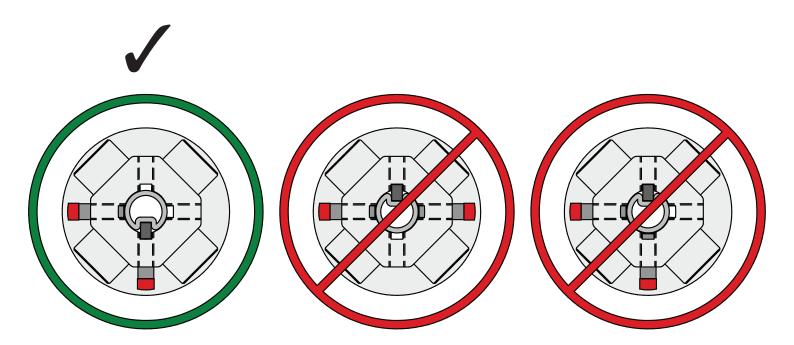

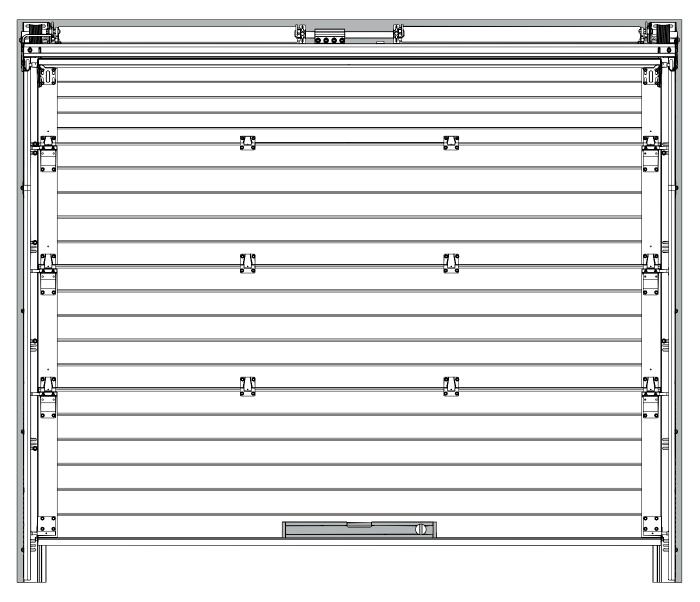


 Once the tension is in place, check that the door is level. Check the balance and adjust if necessary



## **Reveal Options**

Executive Framing Kit

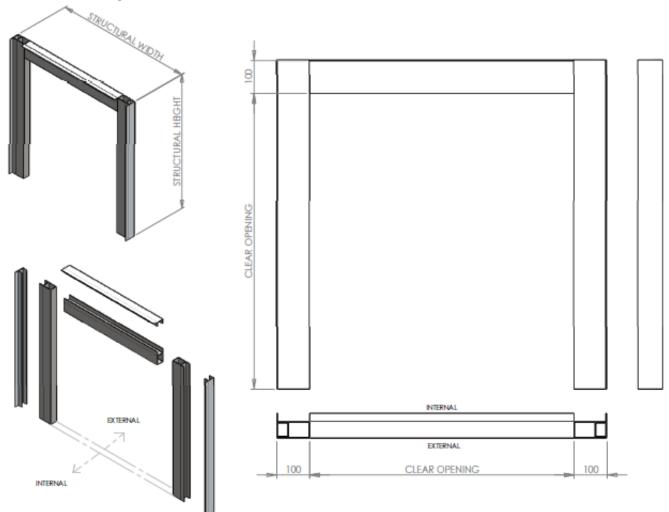

**Reveal Brackets** 

Position 5 per side, secure each bracket with 2 M8 x 18 bolts and M8 serrated nuts

