




SeceuroGlide Compact Garage Door Fitting Instructions




Fitter's Information Pack - SeceuroGlide Sectional Compact

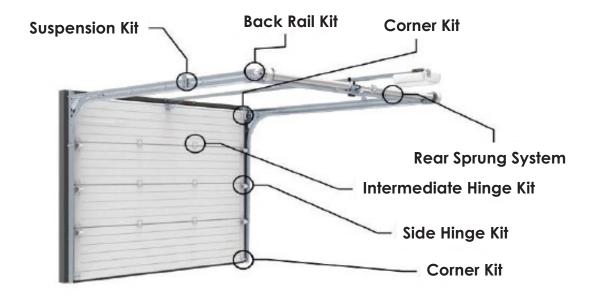


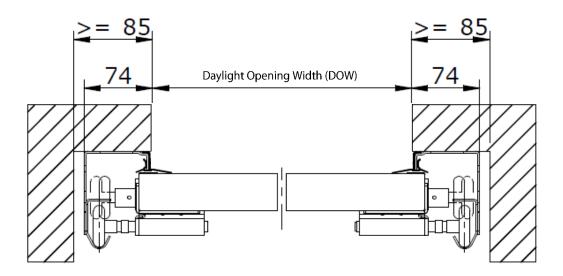


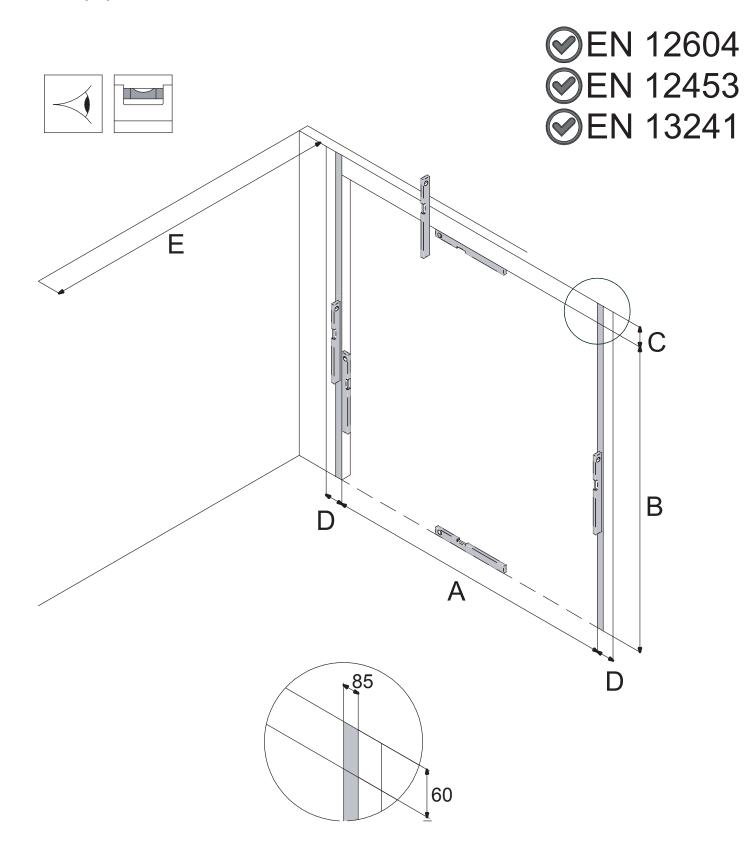


| Α | В | С | D | E |
|----------------|-----------------|----------------|----------------|--------------------|
| DLW | DLH | FHR | FSR | FMD |
| Daylight Width | Daylight Height | Free Head Room | Free Side Room | Free Mounting Dept |

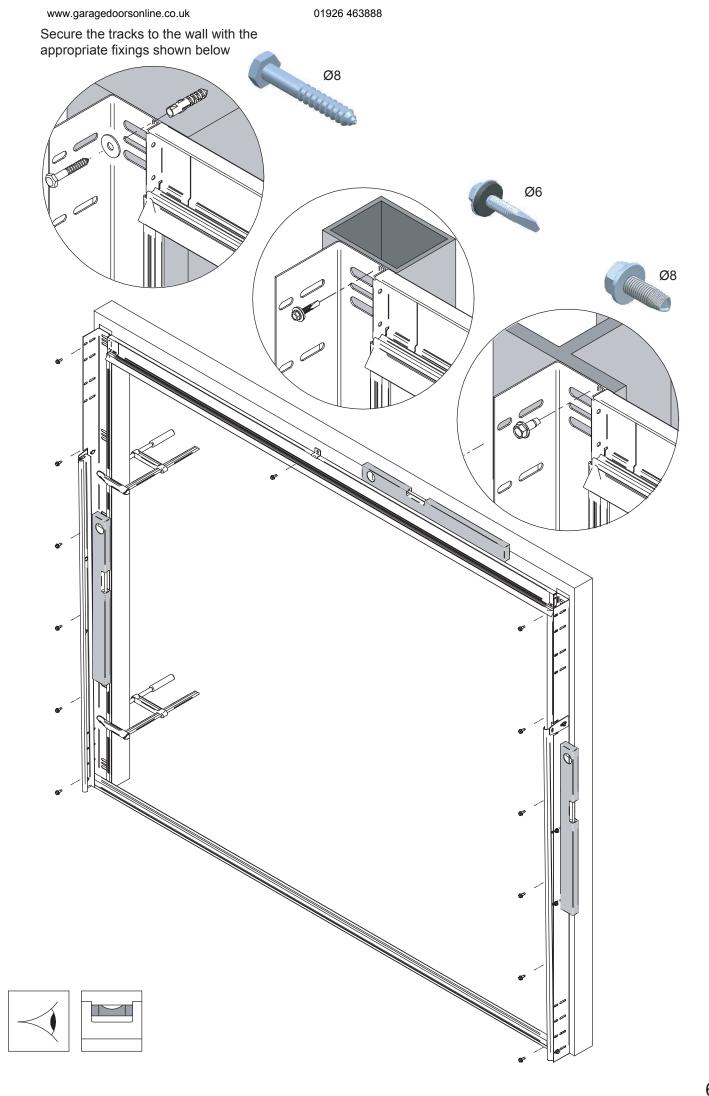


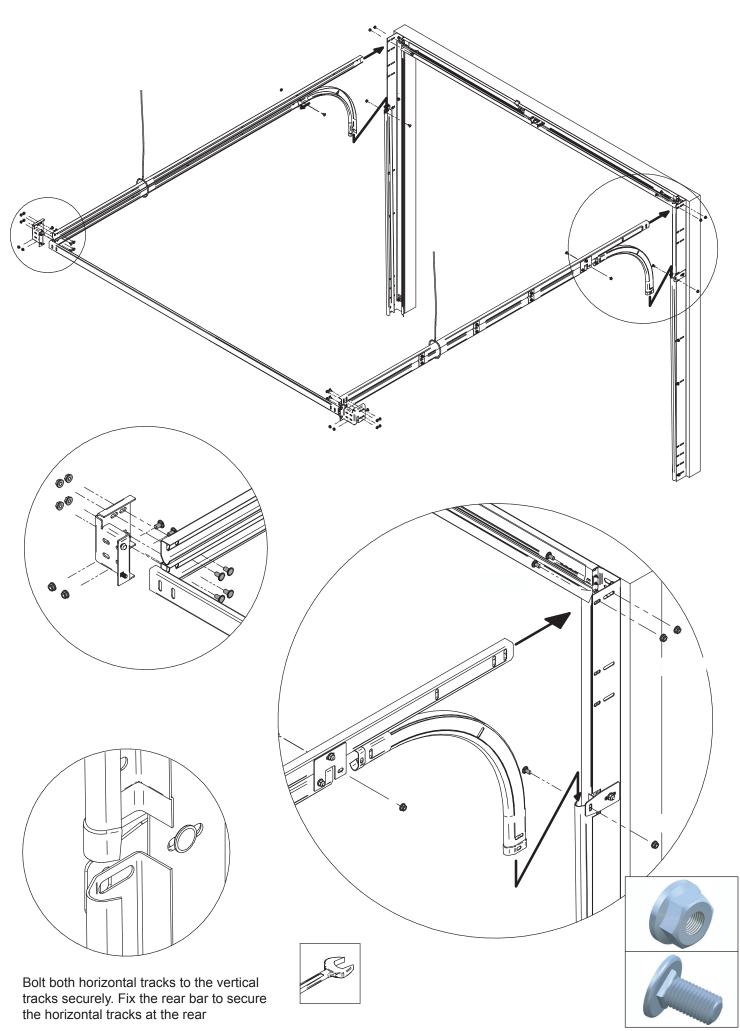


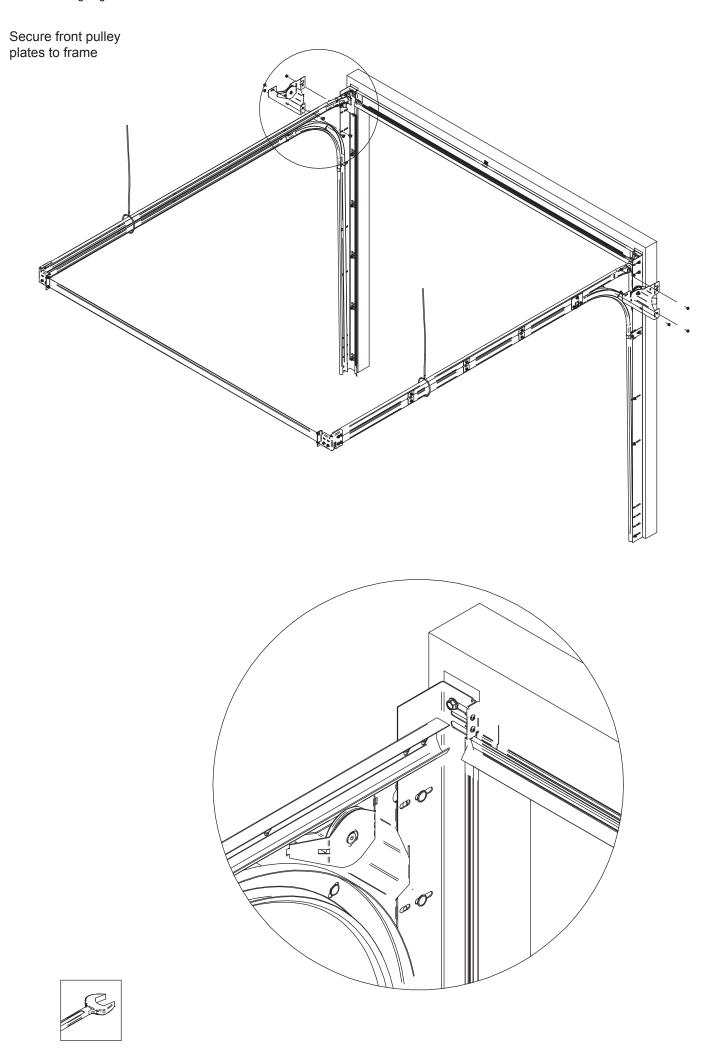



Measure from corner to corner to determine if the horizontal track area is square, adjust accordingly. Before securing the L shape hangers, ensure the horizontal tracks are level

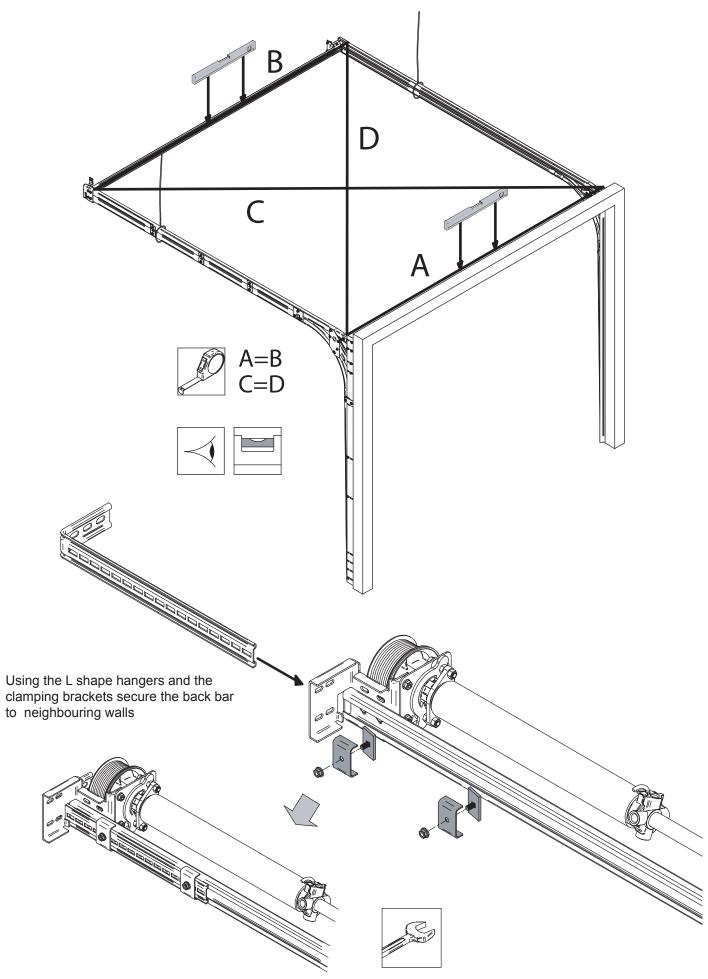


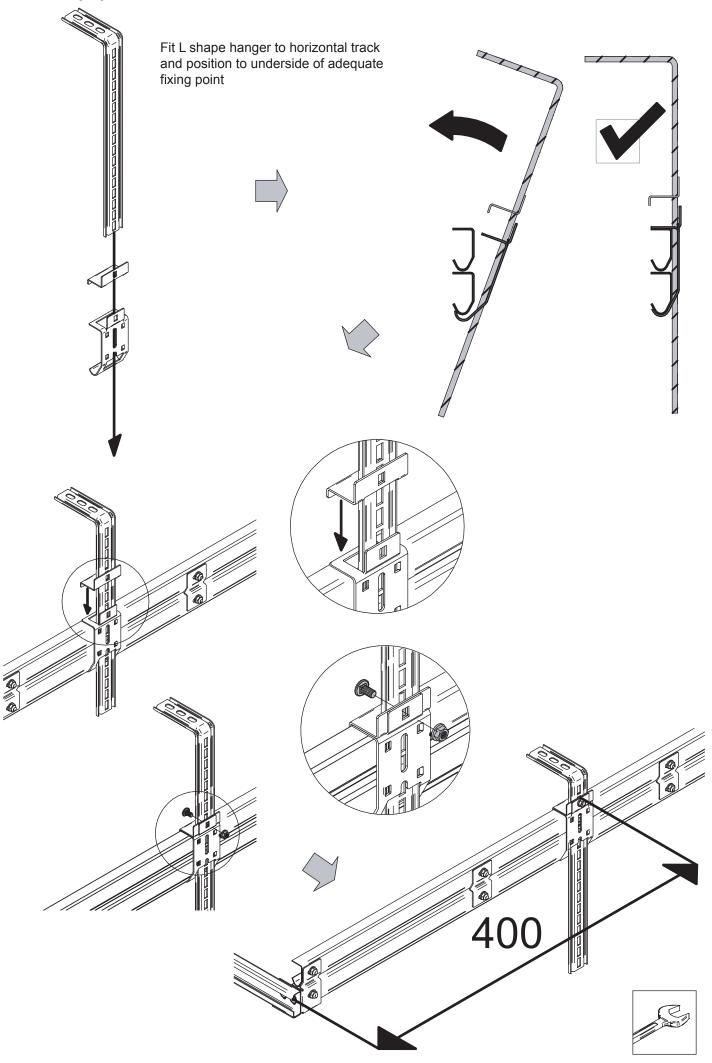


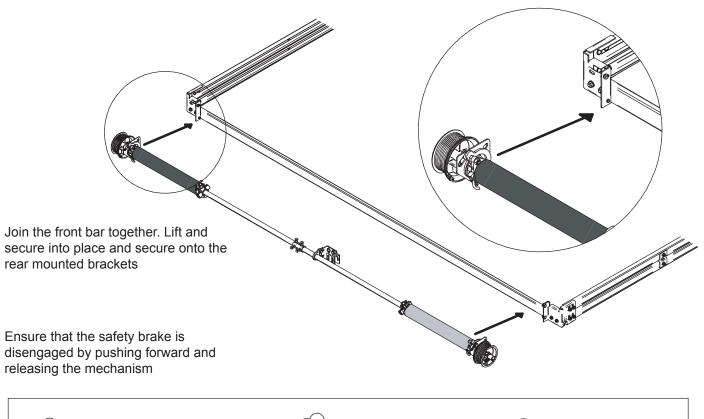


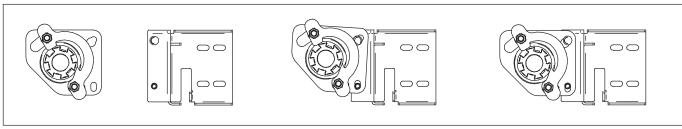


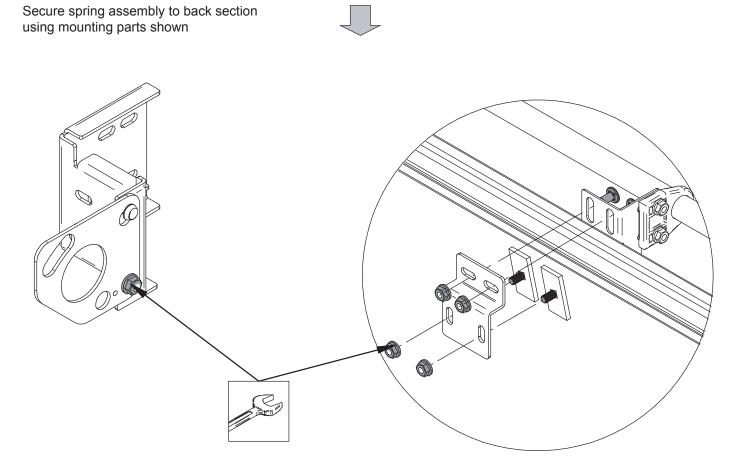

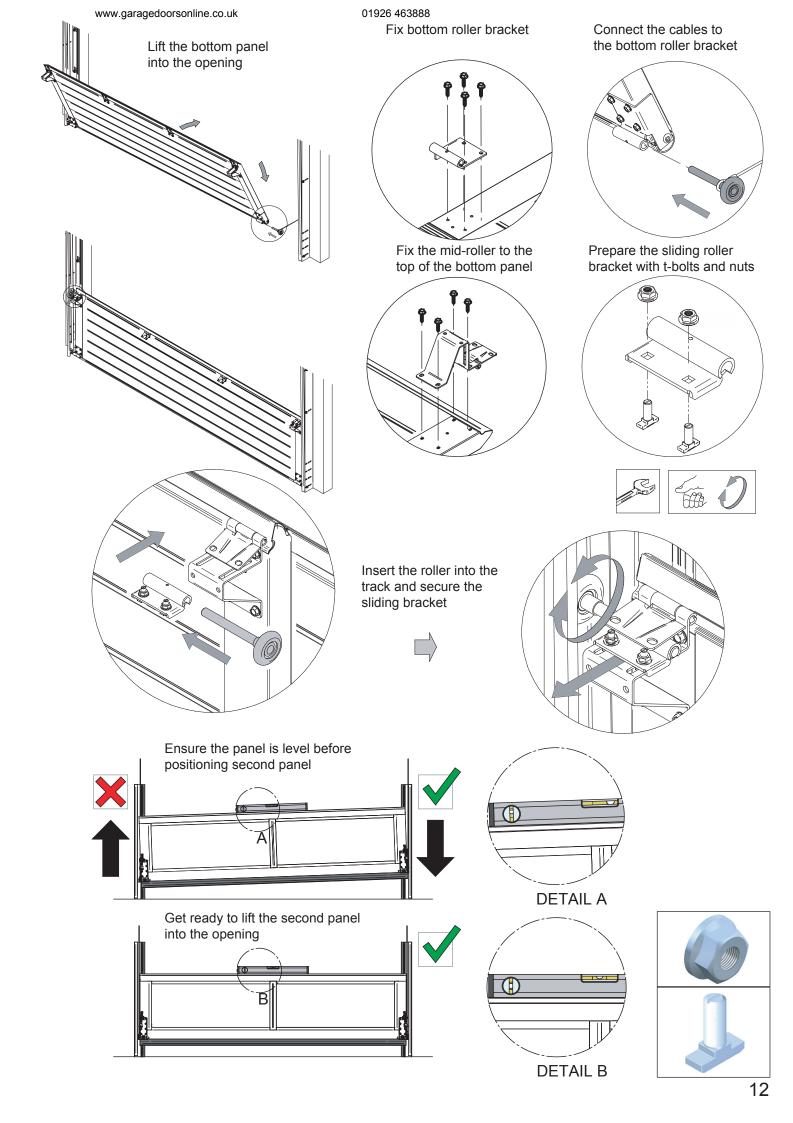


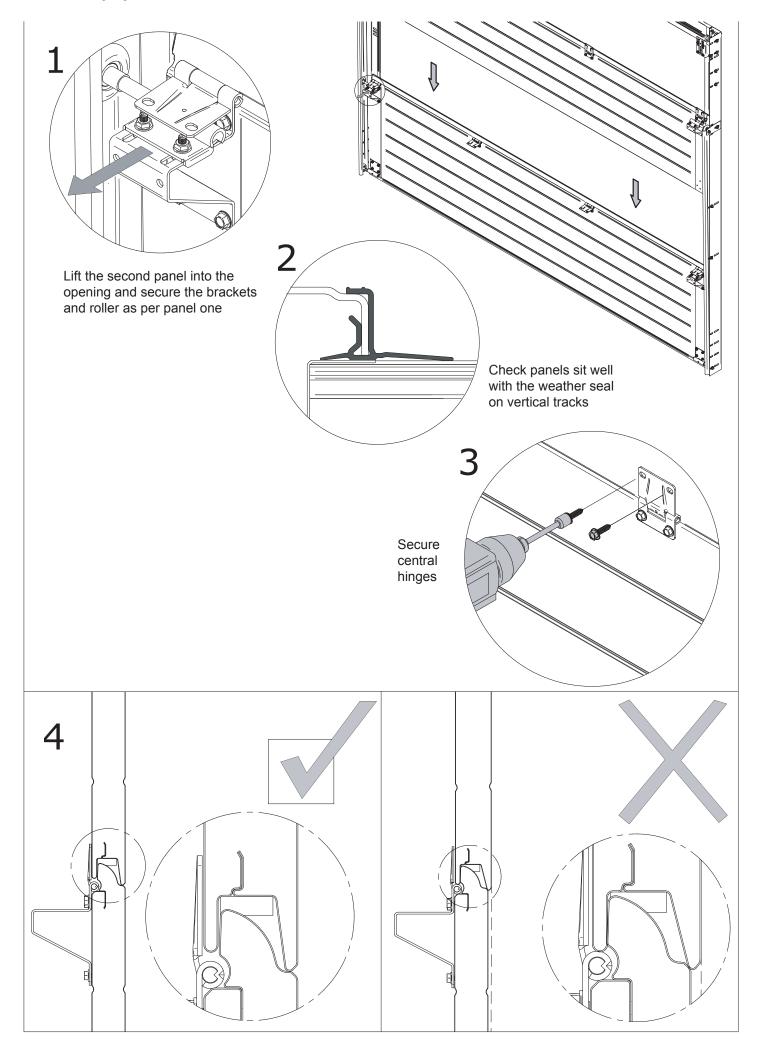


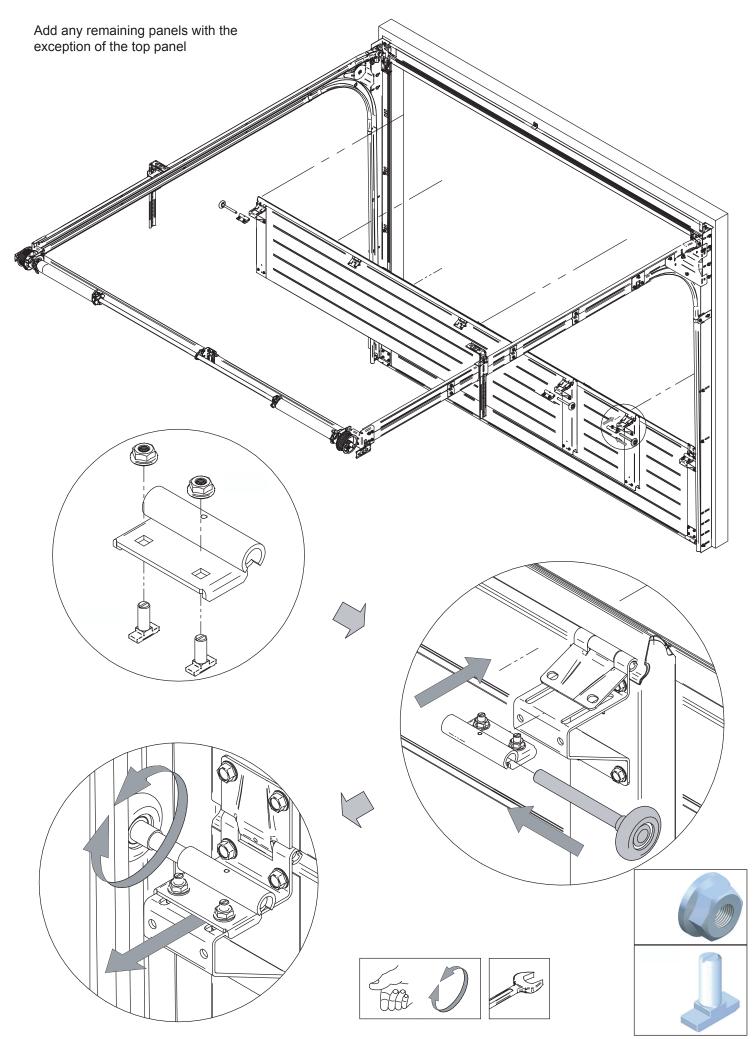


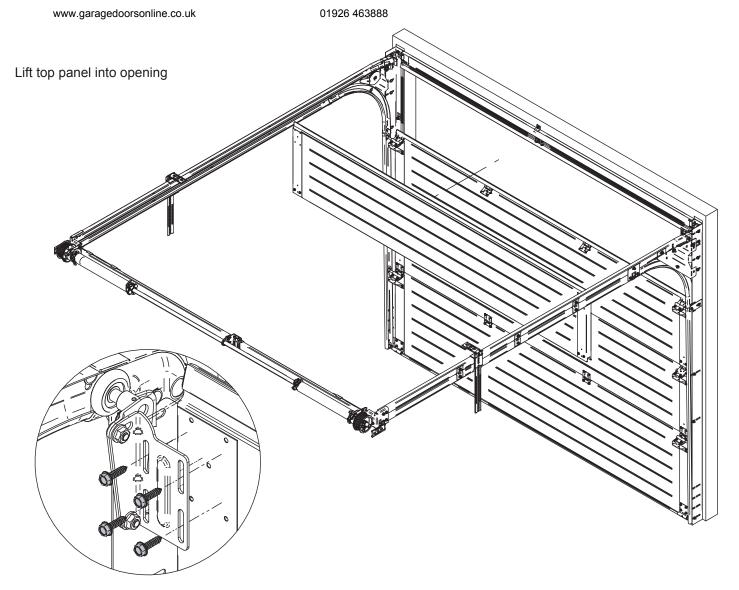


Secure the top roller brackets to the top panel

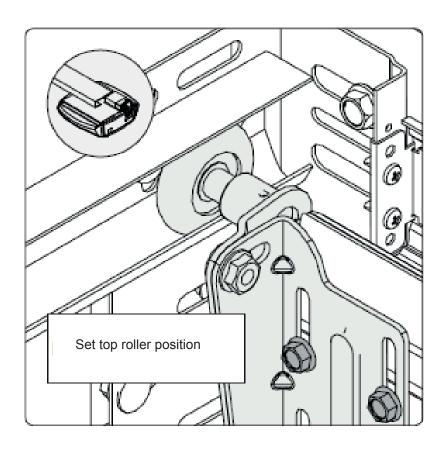

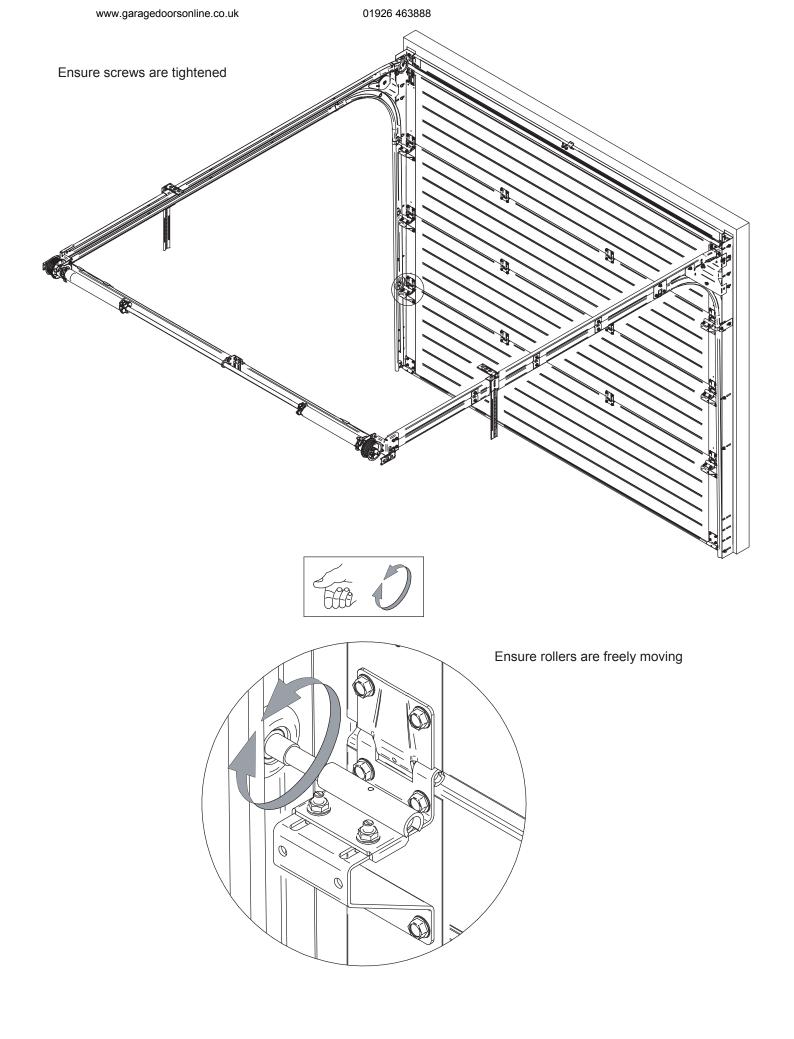


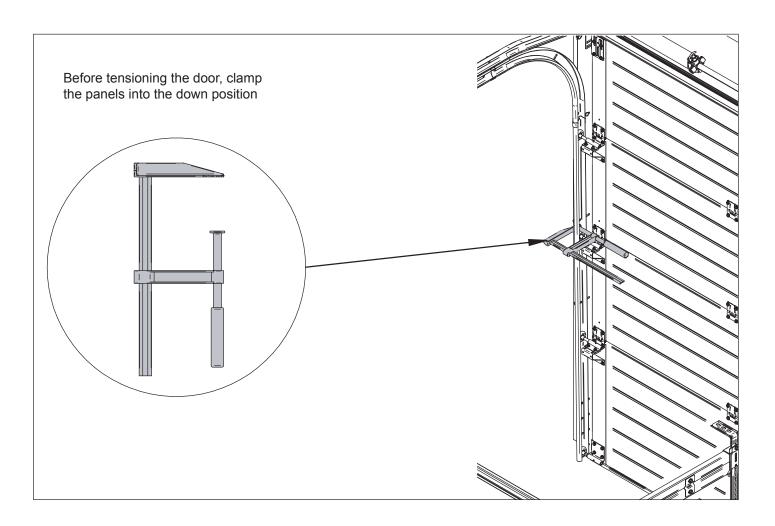

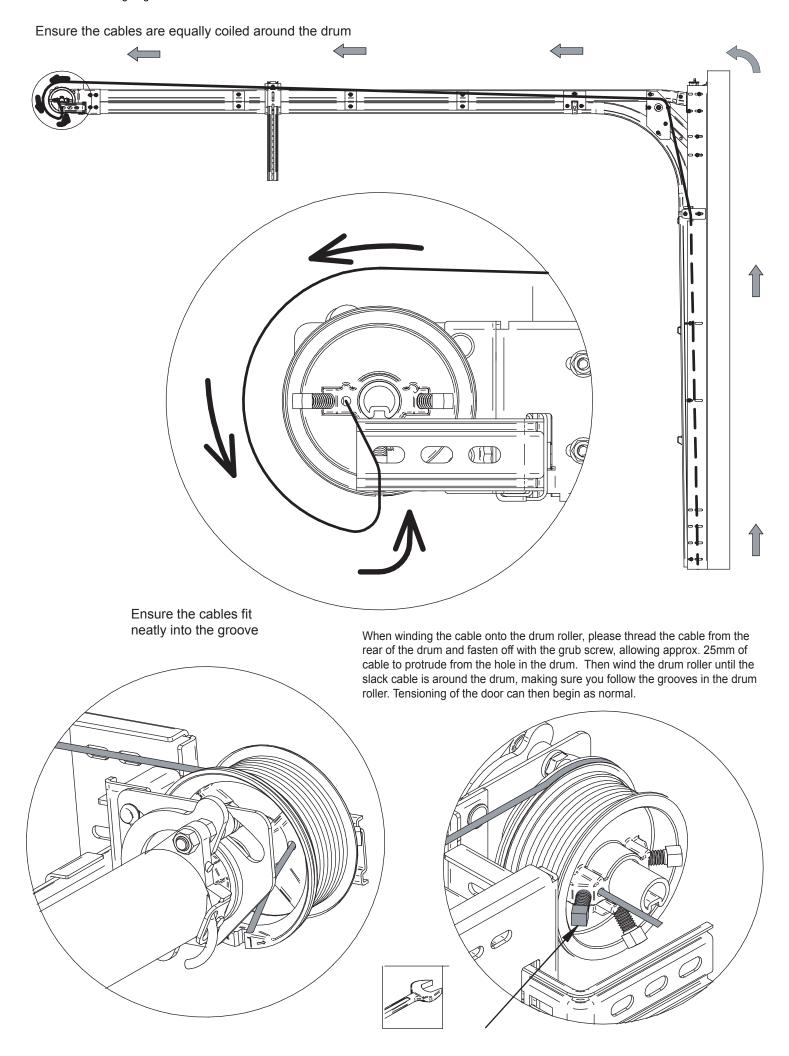





Check paperwork or spring tension label found on the spring for number of turns

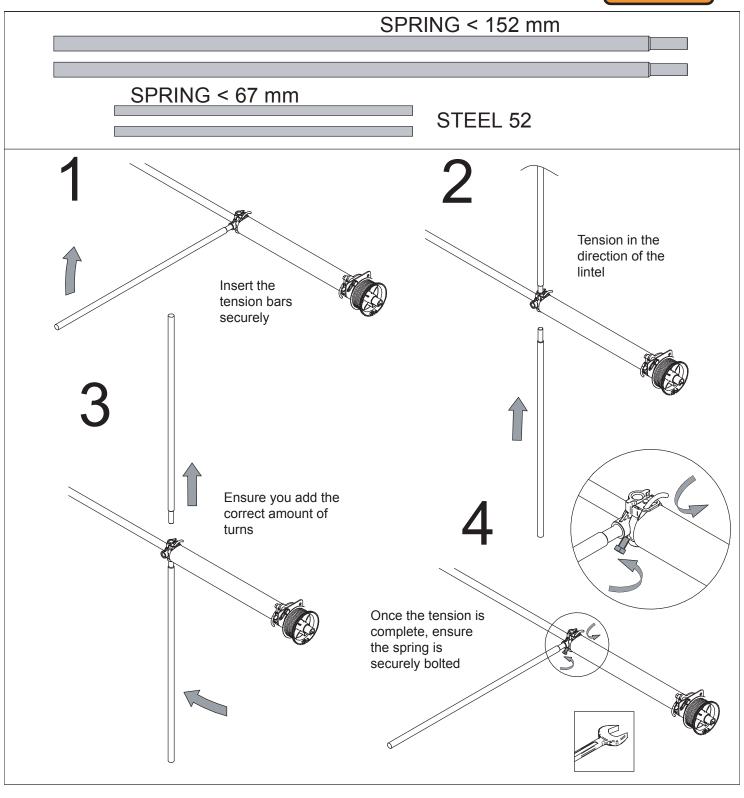


Correct fastening of winding plug

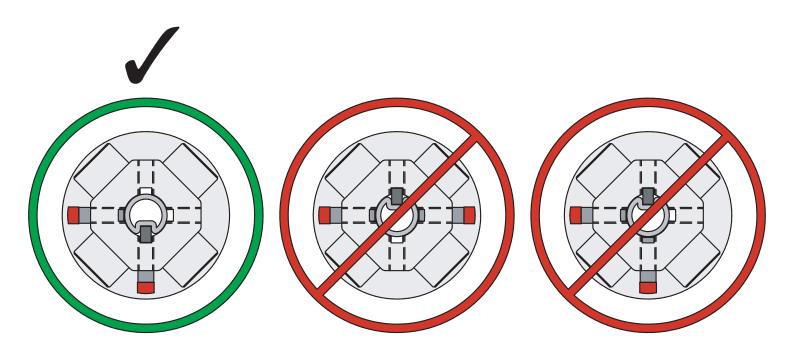

Ensure the locking bolts are pressing down on the key way

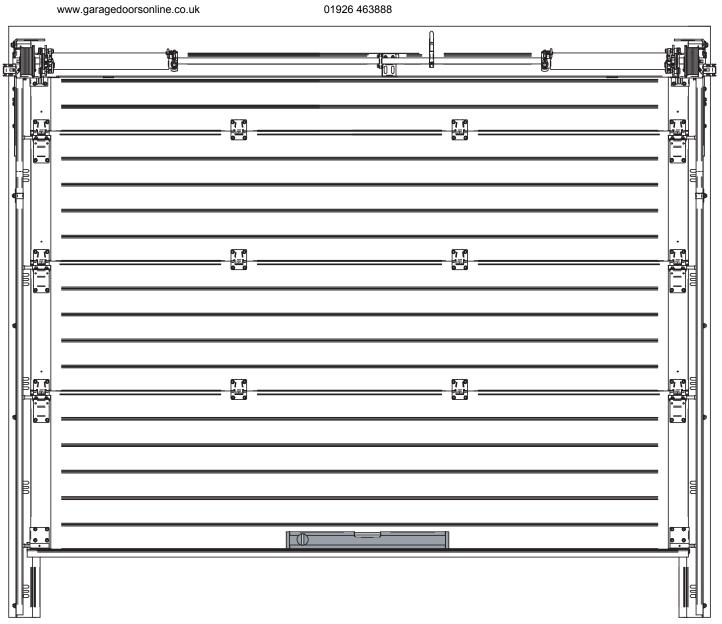


 Once the tension is in place, check that the door is level. Check the balance and adjust if necessary



Reveal Options

Executive Framing Kit

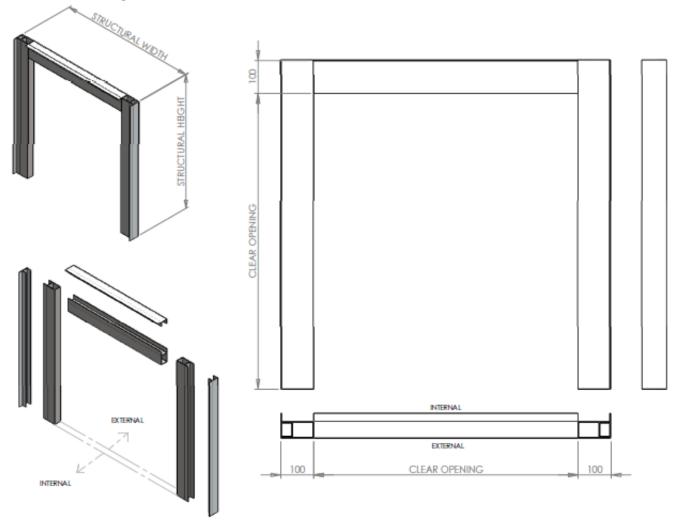

Reveal Brackets

Position 5 per side, secure each bracket with 2 M8 x 18 bolts and M8 serrated nuts

