

INSTALLATION

OPTIONS


SeceuroGlide Excel must always be installed by a trained installer and in accordance with the specified fitting criteria (as stated in the installation instructions) in order to meet LPS 1175 certification requirements.

The product should only be installed to brick, block work, structural steel or structural timber to be certified.

The door must always be fitted internally (as below) with the end plates above the opening. The guide rails and box may be installed in the reveal (between the opening) but in this instance must be fitted with special steel reinforcing shoes and reinforced end plates.


FACE FIX - INTERNAL

- Installed inside the opening.
- The inside edge of the guide rails line up with the brick opening.
- Ideal where headroom inside the garage isn't seriously restricted.
- Internal reveal fixing may be used to great effect in arched openings.

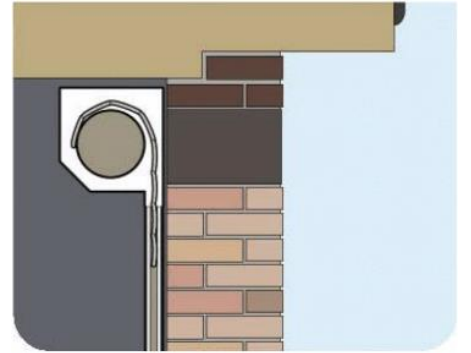

REVEAL FIX

- Installed within the opening itself.
- Must be fitted with special steel reinforcing feet.
- Maximises internal space in the garage whilst not obscuring the exterior of the garage.
- Requires good reveal headroom.
- Reduces with drive through width of the door by the width of the guide rails.

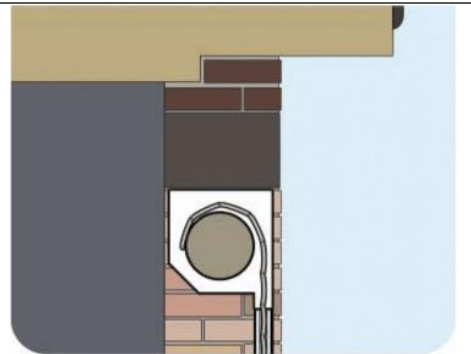

All SeceuroGlide Excel doors come with an Operating & Maintenance manual for the end user.

Manufactured by SWS UK, Claughton, Lancs, LA2 9LA.