



Instructions Slideaway Doors T
Handle Lock Pack and Fittings




AZSP 1002 CONTENTS

1 off	Key Number Tag	DPIN 0425
1 off	Cable Tie	DPIN 0646
1 off	No 10 x 1/2" Self Tapping Screw	DPIN 0123
2 off	M6 x 45mm Pan Head Screw	DPIN 0162
1 off	3/16" Washer	DPIN 0204
2 off	M8 Washer	DPIN 0209
1 off	T Handle Lock (Drilled) Black	DPIN 0504
1 off	Internal Lock Lever	DPIN 0806
1 off	Lock Cam	DPIN 0811
1 off	Instruction sheet	DPIN 5502

1. Insert Lock from front of door through holes and secure from inside garage using two pan head screws with washers as shown.
2. From front of door ensure that lock handle is turned fully anticlockwise and slide lock cam onto spindle.
3. Fit lock lever onto lock cam as shown and secure to lock spindle using self-tapping screw and washer.
4. Locate looped ends of lock cables securely in lever slots and adjust for correct operation using sliding toggles on cables.

OUTER FACE
OF DOOR

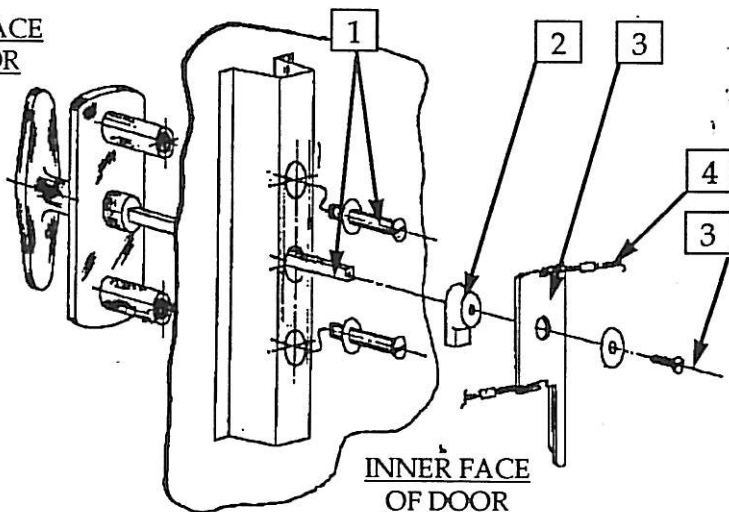

INNER FACE
OF DOOR