


TECKENTRUP 62 SWING SECURE TECHNICAL

TECKENTRUP

DOOR SOLUTIONS

Ordering Size

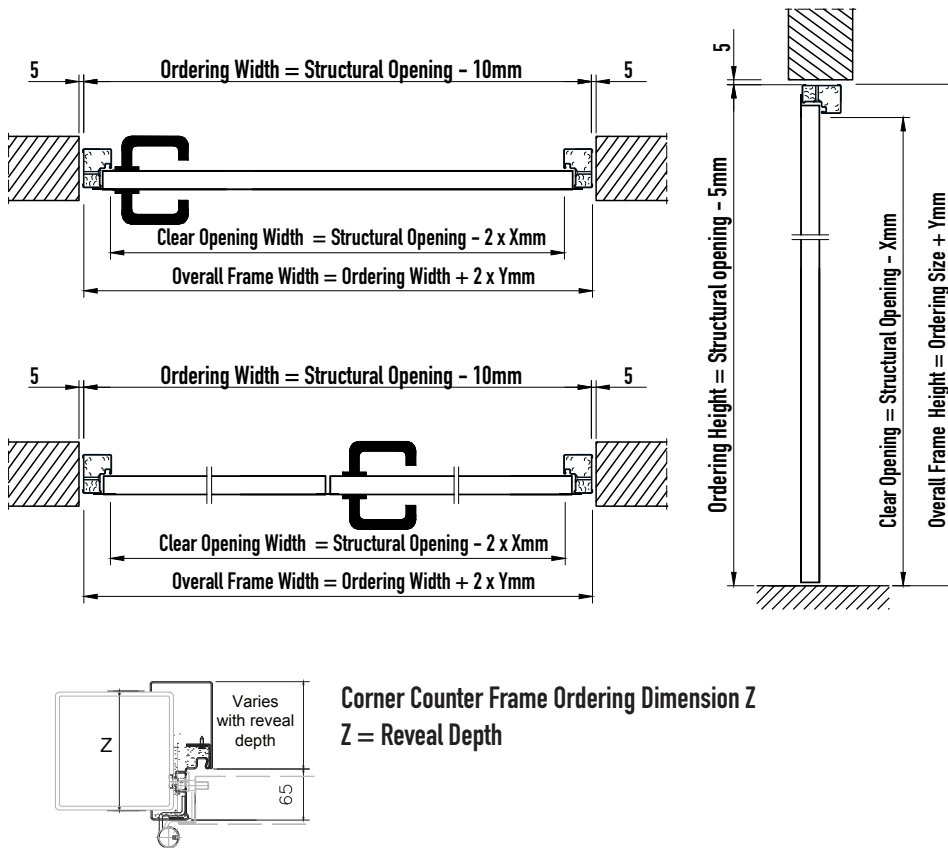

Block Frame

X = 80mm
Y = 0mm

Corner Frame

X = 52mm
Y = 29mm

Corner Counter Frame

X = 52mm
Y = 29mm

Frame FB

Overall Frame Width


1 Leaf = +9mm

2 Leaf = +6mm


Overall Frame Height

= +9mm


Threshold Detail

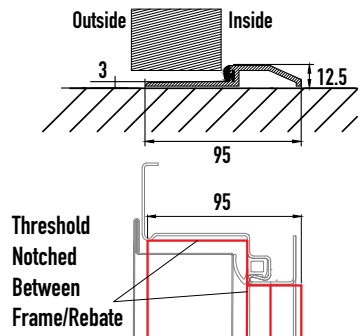


Teckentrup 62 1/2 Swing Secure Block Frame (Classic)

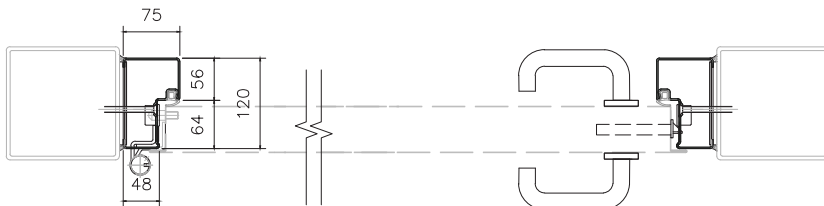


Block Frame FB Detail

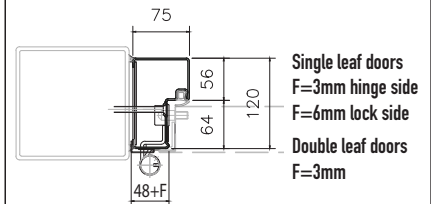


Teckentrup 62 1/2 Swing Secure Corner Frame (Wrap)

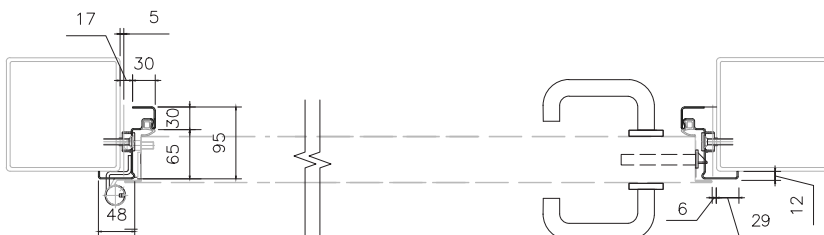


Corner Frame FB Detail

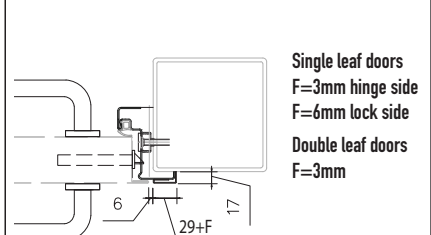

Teckentrup 62 1/2 Swing Secure Corner Counter Frame (Wrap)

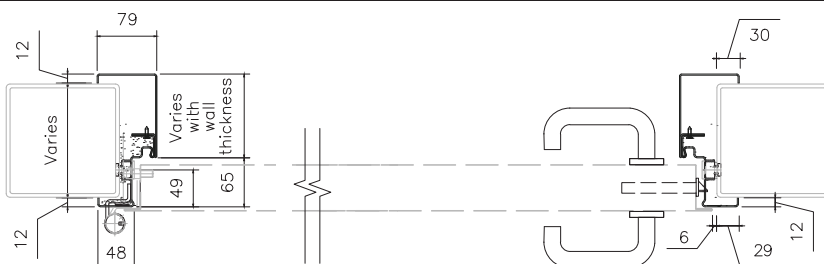

Corner Counter Frame FB Detail

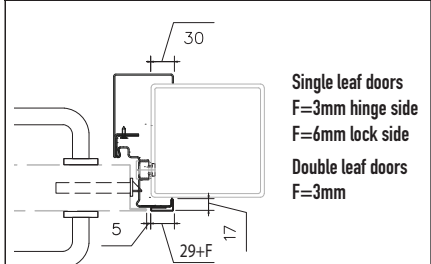


TECKENTRUP 62 SWING SECURE TECHNICAL

TECKENTRUP
DOOR SOLUTIONS


Windows

CarTeck Swing Secure Standard Window Positions



3 windows

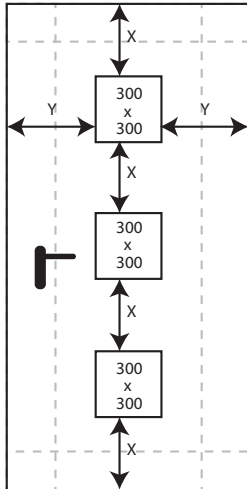

2 windows

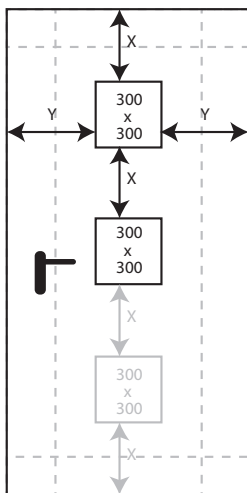

1 window

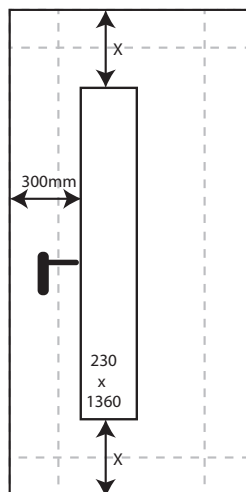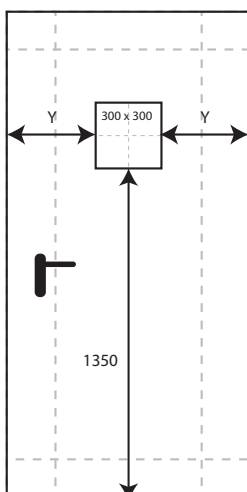


D-Handles

CarTeck Swing Secure D-Handle Positions

1200mm

To the centre
of the handle

150mm

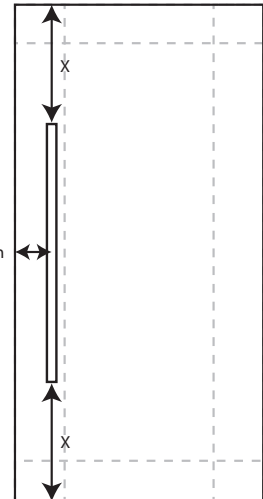

1500mm

To the centre
of the handle

150mm

